


3
BC-60

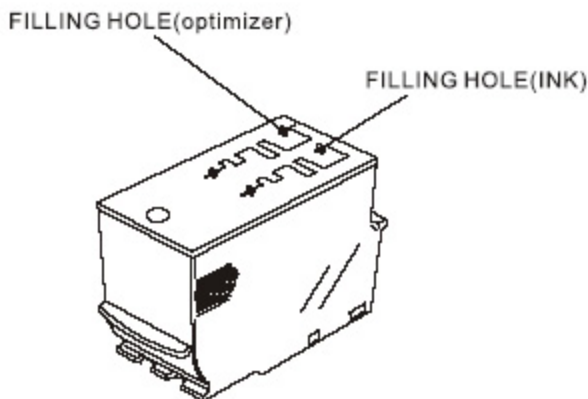

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. uncover the label on the cartridge and review the filling hole. Put aside the label for later use.
3. Assemble the syringe and needle. Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full and pull out the syringe.
4. Fill the optimizer in the same way as filling the ink. Then, stick the label back to its original place.
6. Clean the ink on the surface of the filling hole with tissue paper. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

Canon BJC-700j/7000/7004/7100