


## BJI-201BK、C、M、Y

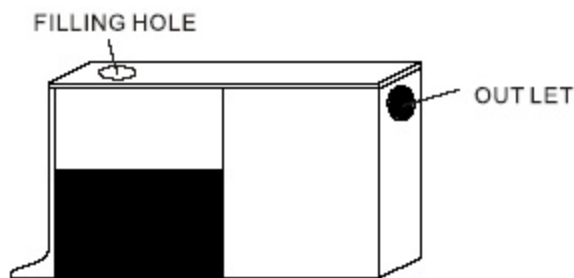

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Turn the cartridge upside down and push the ball into the cartridge and expose the filling hole.  
Please notice that some cartridges have the filling hole on the top surface under the label.
3. Assemble the syringe and needle .
4. Slowly and carefully fill ink into the filling hole until it is full.
5. Seal the filling hole with the robber plug. And make sure it is not airtight,
6. Reload the cartridge into the printer and run "head cleaning" utility 2-3 times before printing test or nozzle test.

Canon BJC-600/600J/600S/600E/610/610JW/620/620JW/680J/  
820J/880J;Apple Color Style Writer/Color Style Writer Pro