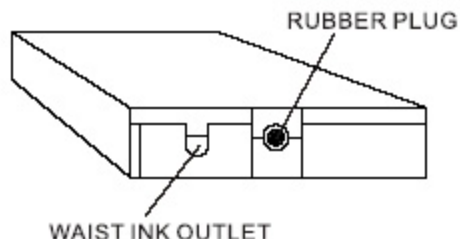


CANON BJI-642/643
EPSON S020010

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Assemble the syringe and needle.
3. Make sure the filling hole upwards, insert the tip of needle only through the rubber seal and fill in 40ml of ink. Do not filling too far in case the internal bladder of the cartridge will be broken.
Please try to avoid to inject the air bubbles into the cartridge as they may cause white line. In case that air is in it, please sucking it carefully with the syringe.
4. Reload the cartridge into the printer and run "head cleaning" utility 2-3 times before printing test or nozzle test.

CANON BUBBLEJET BJ130/300/330;BJC800/820/880;
EPSON SQ870/1170;