


BC-10, BC-11BK, BC-11C, BCI-15BK, BCI-15C

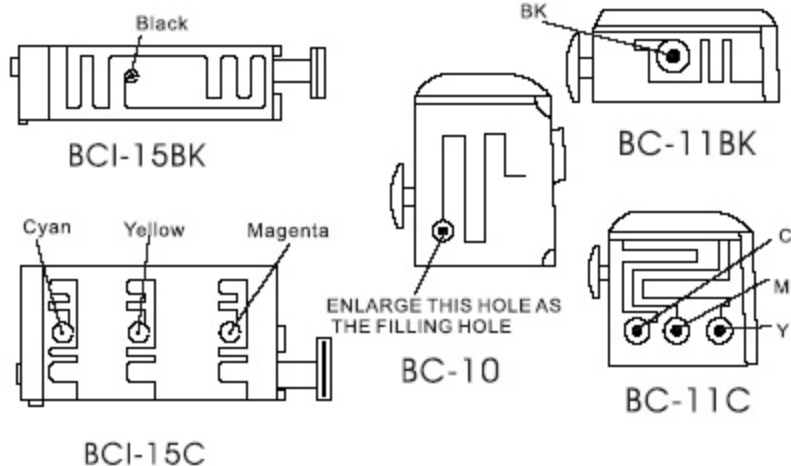

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Tear out the sticky label to expose the filling hole (see diagram). Enlarge the filling hole with the screw driver.
3. Assemble the syringe and needle.
4. Insert the needle through the filling hole and push it into the center of the cartridge about 5-6 mm.
5. Press the plug of the syringe slowly and carefully to fill the ink. When ink overflows from filling hole or outlet hole, stop filling ink immediately.
6. Reload the cartridge into the printer and run "head cleaning" utility 2-3 times before printing test or nozzle test.

CANON BJ30, BJC50/70; STARWRITER JET 4000
(PRINT SCANNER)