

Applies in
MINUTES

WALLigraphy™

Installing Overlays


Layering words and phrases to make a unique, personal statement is easy. It does, however, require a few more steps than installing a single word or phrase. These instructions share tips and techniques which help you create your own layered expressions with WALLigraphy™.

Determine Placement of Your WALLigraphy™ Layers


1. Remove WALLigraphy™ from the packaging and prep the pieces as instructed in the printed instructions enclosed with your product.
2. Position the pieces together in front of a window or bright light. Arrange the foreground piece in relation to the background piece.




3. Hold the two pieces firmly together and carefully lay them on a table or smooth flat surface.
4. Mark a reference line in pencil on the application tape of your background piece where one or more edges of the foreground piece intersect the background. This helps you reposition your foreground piece on the mounting surface in Step 6.

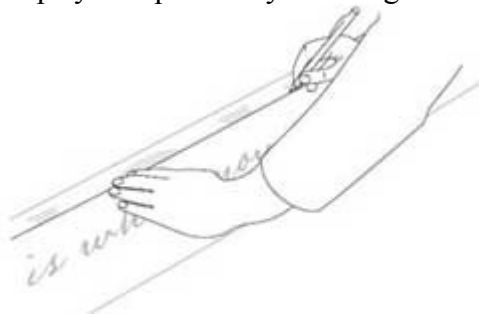

5. Position and level your background piece on the mounting surface. Tape it into place with low-tack masking tape. Apply the tape to an edge that will not be covered by the foreground piece when it is positioned in the next step.

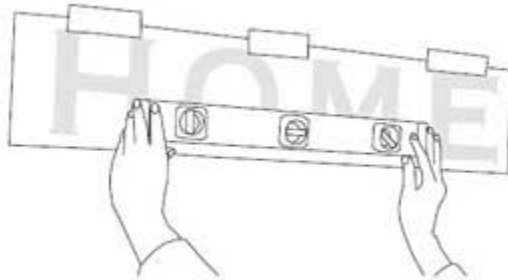

6. Align the foreground piece over the background piece using the reference line you marked in Step 4. Recheck your foreground piece with a level as your original reference mark may not be accurate.

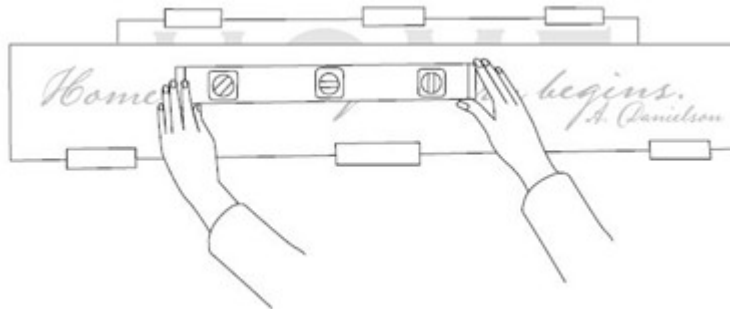


7. Tape one edge of the foreground piece to the mounting surface with low-tack tape. Select an edge that does not overlap the background piece. The two pieces must be free to move independently for the next step.
8. Flip the foreground piece away from the background piece using the tape as a hinge.



NOTE: In our example, the foreground flips down. If you opted to mount your foreground piece slightly above the background, you would flip the foreground up. In this case use another piece of tape to hold the foreground out of your way while you mount the background piece.

Apply Background Piece


1. Flip the background piece so the release liner is facing you, using the tape as a hinge. Carefully peel the release liner away until your WALLigraphy™ is fully exposed.

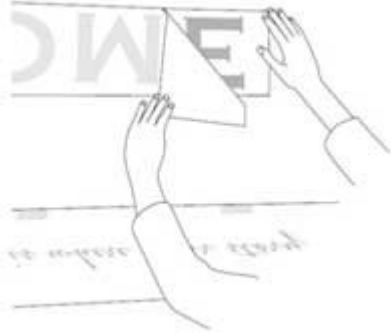

2. Flip the background piece back into position on your mounting surface and smooth into place with the palm of your hand. Work from the center toward the edges and remove any large air bubbles or wrinkles before you burnish the lettering in the next step.




3. Transfer the lettering onto your mounting surface using the burnishing tool included. Rub firmly over the lettering – especially over the edges of block lettering or fine lines on phrases.

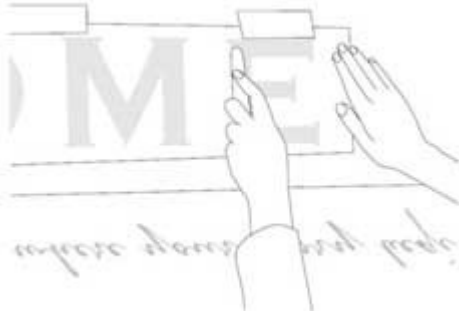

4. Start in the upper right corner and slowly peel the application tape away from the lettering at a sharp angle. If the lettering lifts off the wall, gently press it back into place with your finger or the burnishing tool and continue to peel away the


application tape until your entire background piece is exposed.

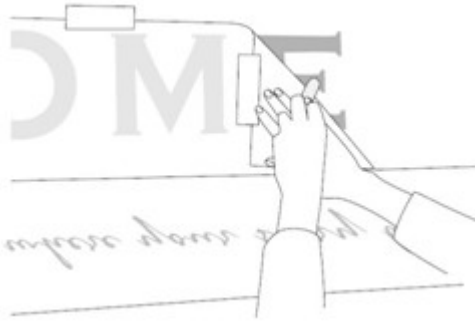

Apply Foreground Piece

The foreground piece is applied the same way as the background piece.


1. Carefully remove the release liner.

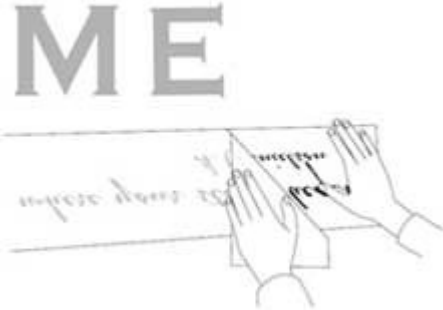


2. Flip the foreground piece into place on the mounting surface.




3. Smooth the lettering onto the surface. Work from the center out to remove any large air bubbles or wrinkles.

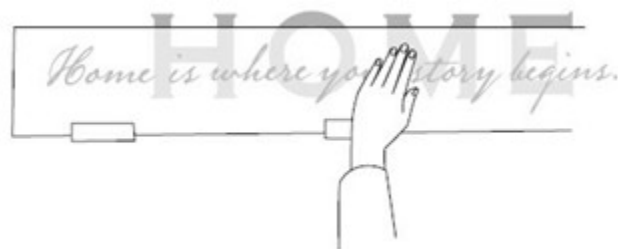

4. Burnish the lettering.

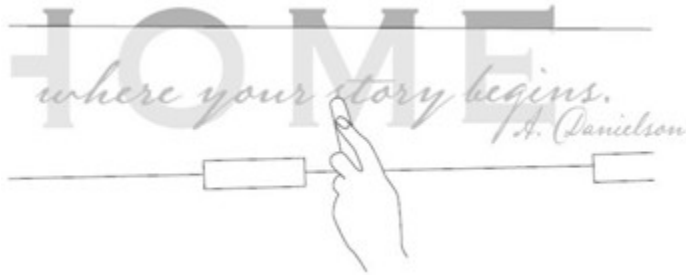

5. Slowly remove the release liner.

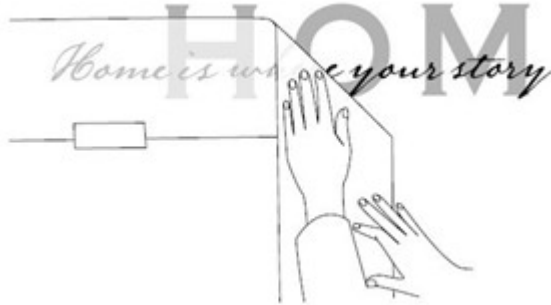

6. Step back and admire your WALLigraphy™ overlay!

