


Allison Center Bottom Mount

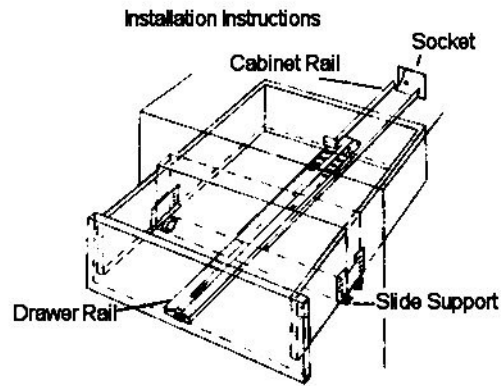

Cabinet Rail

Install rear socket centered to face frame opening. Notches on side of socket should be level with face frame mounting surface.

Place cabinet in rear socket. Using Pan Head Screw, fasten front end of cabinet rail to face frame centered opening.

Side Supports

Tack Glides to be installed to support drawer sides.

Drawer Rail

With drawer rail flat against drawer bottom and centered on drawer, drive progs into back of drawer face. Install rear drawer clip in slot nearest back surface of drawer. Clip may be reversed for best position. Install with Pan Head Screws through clip into drawer back panel and into back of drawer front.

Assembly

Engage rear of drawer rail in cabinet rail and close drawer so that front drawer panel is flat against cabinet face. Remove drawer and install Pan Head Screw in top of rear socket to clamp rear of cabinet rail. To set anti bounce back device, bend down tongue near front of drawer rail slightly.

David Allison Co., Inc. Woodbury, New York 11797