

# 2002 Puck instructions with integrated boost control cable.

**Engine must be off and key removed from ignition.**


**Important note for vehicles with modified injectors! Make sure that the wastegate has been modified accordingly. Please check with shop that performed the work on the vehicle.**

## 2002 POWER PUCK

**Boost Male Connector**

**Data Link Connector**

**Boost Female Connector**

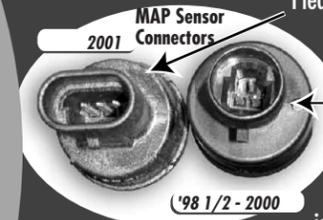


Please note that the 2001 PowerPuck is designed for the 2001 plus Dodge Cummins only.

DiabloSport offers the PowerPuck for the 1998 1/2 - 2000 Cummins utilizing a different cable; please contact your local dealer for additional info.


The added feature of the integrated boost control cable is designed to aid vehicles with modified injectors.

**IMPORTANT NOTICE** Please read before installing the PowerPuck  
**Manufacturer Warranty**

By law, the installation of a DiabloSport PowerPuck does not void the manufacture warranty. However, if there is a time that you need to take your vehicle in for service or repairs, we suggest that you remove the PowerPuck for the following reasons: **1** Each individual dealer can, at their discretion, set up their own warranties and policies that would void parts of or the entire warranty by the addition of a non-Dodge part. **2** It will confirm whether there is a problem with the PowerPuck or with the vehicle. **3** Anytime a diagnostic machine is used, the vehicle's computer needs to be in stock condition. In order for the diagnostic machine to accurately perform its task, it must be able to communicate with the stock computer program. With the PowerPuck installed, the diagnostic machine will not be able to do so. Failure to reinstall the stock tuning can result in unnecessary repairs.

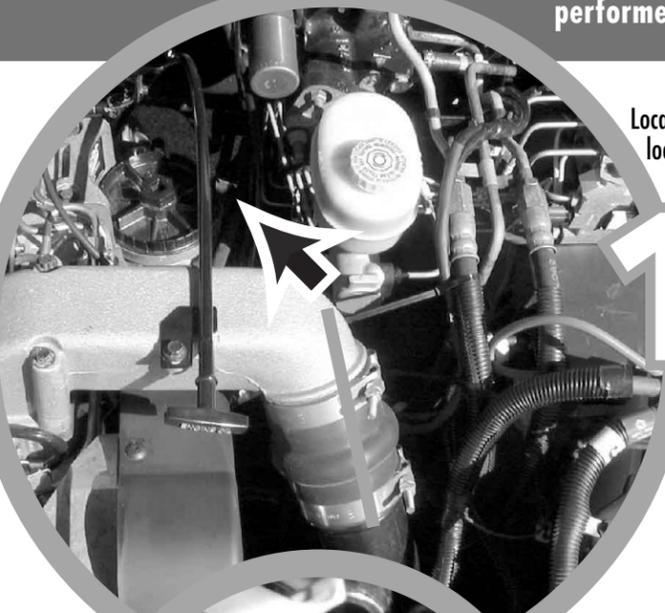

1 Locate your MAP sensor located on the right side of the engine block

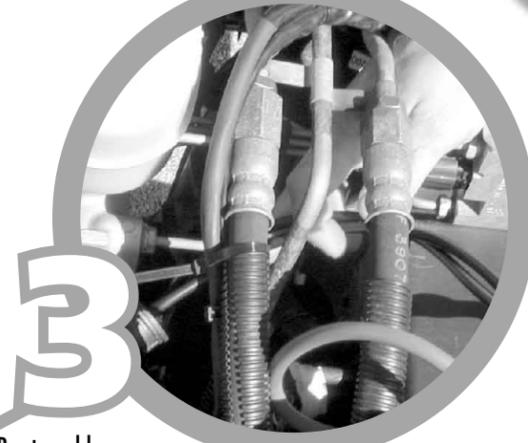

3 Route cable appropriately away from hot or moving surfaces.



2 Disconnect your MAP sensor



4 Connect the female connector of the boost control cable to the MAP sensor.

Connect the male connector of the boost control cable to the factory connector leading to the ecu.




5 Locate you Data Link Port Connector, remove the cap covering the port.



6 Connect the DiabloSport PowerPuck male Data Link Port connector into the engines Data Link Port.



7 The PowerPuck will find its home on top of the fuse box cover. (this will allow for quick and easy access) Clean the top of the fuse box with the alcohol pad provided. Wait for the alcohol to dissipate.

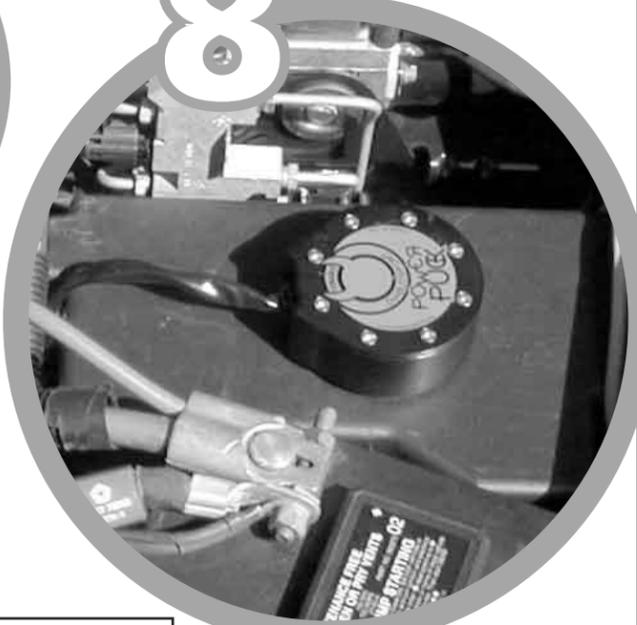

8 Carefully peel off the Velcro protective film and firmly affix the PowerPuck in place. Let it dry for 24hrs before removing Puck.

# DIABLOSPORT

THE POWER PEOPLE  
[www.diablosport.com](http://www.diablosport.com)

Disclaimer: Not legal for sale or use on any pollution controlled motor vehicles.  
Legal in California only for racing vehicles which may never be used upon a highway.