

Xlab Flatwing Mounting Instructions



1. Tool Needed: 4mm Allen (Not Included in kit)

Open package and ensure all pieces and hardware have been included.

You should have:

- 1-Flatwing
- 4-Bolts
- 4-Serrated lock washers
- 2-Butterfly seat rail clamps.



2.

Determine which holes at which angle will work best on the outside of your seat rails.





3.

Take one butterfly seat rail clamp, one bolt, and one serrated lock washer.




4.

Place the butterfly clamp on the inside of the Flatwing and line up with the appropriate hole.

Take the serrated lock washer and place it on the bolt.

Put the bolt through the hole of the Flatwing.

Barely thread onto the butterfly clamp, one or two threads, no more than that.

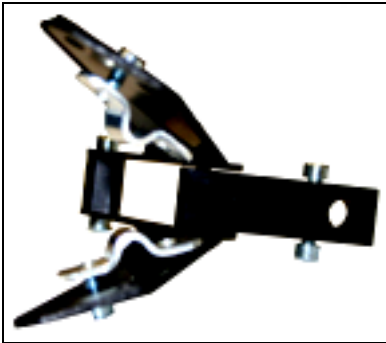

5.

Place both butterfly clamps around the seat rails.

Repeat on the other side of the Flatwing.





6.

Use the remaining bolts and serrated lock washers to secure the butterfly clamp on the seat rails through the appropriate holes.



7.

Tighten Bolts.



8.

Position swing arm so that the bolt lines up with the bottom hole of your water bottle holder.



9.

Install your water bottle holders on the sides of the Flatwing one bolt at a time.



10.

Tighten bolts through your water bottle holder one bolt at a time. Repeat on other side





11.

Tighten swing arm bolt.

Repeat on other side.



12.

Congratulations, you are finished!



Copyright TriSports.com, 2006