



Ⓞ GB Fitting Instructions:	FRONTGUARD
Ⓞ D Montageanleitung:	FRONTBÜGEL
Ⓞ NL Montagevoorschrift:	FRONTGUARD
Ⓞ F Instructions de montage:	PARE-BUFFLES
Ⓞ E Instrucciones de montaje:	DEFENSA DELANTERA BIG BAR
Ⓞ I Schema di montaggio:	PROTEZIONE FRONTALE CENTRALE
Ⓞ S Manual:	FRONTBÅGE

Mitsubishi Outlander 03→



Type Nr.: OUT/1 Ausf.: A
Best.-Nr.: MIT 1251




30 Min.



All rights reserved to modify the text

Type Nr.: OUT/1 Ausf.: A


Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
Herramientas necesarias / Utensile necessarie / Verktuyg somsomkrävs

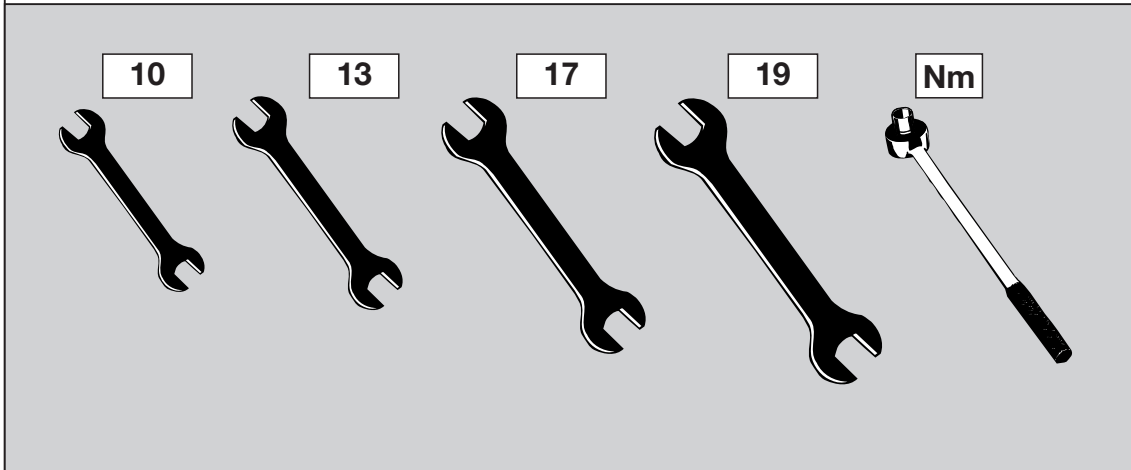


COBRA
TECHNOLOGY & LIFESTYLE



● Fitting Instructions: FRONTGUARD
 ● Montageanleitung: FRONTBÜGEL
 ● Montagevoorschrift: FRONTGUARD
 ● Instrucciones de montaje: PARE-BUFFLES
 ● Instrucciones de montaje: DEFENSA DELANTERA BIG BAR
 ● Schema di montaggio: PROTEZIONE FRONTALE CENTRALE
 ● Manual: FRONTBÄGE

Mitsubishi Outlander 03→



Type Nr.: OUT/1 Ausf.: A
Best-Nr.: MIT 1251


 30 Min.


















All rights reserved to modify the text

1

RESERVE

21.05.2003

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzo / Artikel lista

1		1 x
2	 Gegenplatte 30 x 6	1 x
3	 Stiftschraube M 8	1 x
4	 ø 8,4	1 x
5	 ø 8,1	1 x
6	 M 8	1 x
7	 M 6 x 40	2 x
8	 ø 6,2	2 x
9	 ø 6,1	2 x
10	 M 10 x 35	1 x
11	 ø 10,2	1 x
12	 M 10	1 x
13	 Abschleppöse	1 x
14	 Gegenplatte 50 x 5	1 x
15	 M 12 x 40	1 x
16	 M 12	1 x
17	 ø 12,2	1 x

Type Nr.: OUT/1 Ausf.: A

