



Ⓜ Fitting Instructions:	REAR STYLING BAR SET
Ⓝ Montageanleitung:	HECKBÜGEL
Ⓝ Montagevoorschrift:	BESCHERM STRIP
Ⓜ Instructions de montage:	PROTECTION TUBULAIRE
Ⓜ Instrucciones de montaje:	TUBOS PROTECCION TRASERA
Ⓜ Schema di montaggio:	PROTEZIONE POSTERIORE
Ⓜ Manual:	STÖTFÅNGARSSKYDD BAK

Mitsubishi Outlander 03→



Type Nr.: OUT/5 Ausf.: A
Best.-Nr.: MIT 1259




30 Min.



All rights reserved to modify the text

Type Nr.: OUT/5 Ausf.: A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
Herramientas necesarias / Utensile necessarie / Verktuyg somsomkrävs

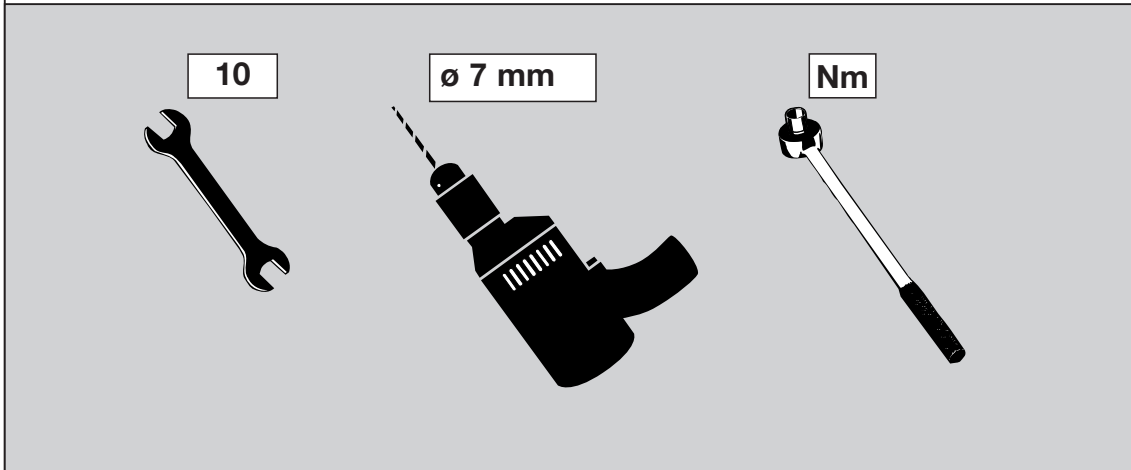

COBRA
TECHNOLOGY & LIFESTYLE

● Fitting Instructions: REAR STYLING BAR SET
 ● Montageanleitung: HECKBÜGEL
 ● Montagevorschrift: BESCHERM STRIP
 ● Instrucciones de montaje: PROTECCION TUBULARIA
 ● Instrucciones de montaje: TUBOS PROTECCION TRASERA
 ● Schema di montaggio: PROTEZIONE POSTERIORE
 ● Manual: STÖTFÄNGARSSKYDD BAK

Mitsubishi Outlander 03→

Type Nr.: OUT/5 Ausf.: A
Best-Nr.: MIT 1259

30 Min.

TÜV GS

All rights reserved to modify the text

1 21.05.2003

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzo / Artikel lista

1			2 x
2		M 6 x 20	6 x
3		ø 6,1	6 x
4		ø 6,4 x 20	6 x
5		M 6	6 x

Type Nr.: OUT/5 Ausf.: A

