

Contents:

Lock Assembly, 2 keys
1/4-20 One-Way Screw (2)
1/4-20 Hex Bolt (2)
Big Washer (2)
Instructions, Warranty Card

Tools Required:

3/16 Allen Wrench or # 30 Torx
7/16 Socket or Adjust. Wrench

Tech Support:

Call 1-800-342-5911



1.

Loosen all three bolts of the handle, push the handle up as high as it will go and tighten the top bolt. Remove the bottom two bolts (see Fig. 7)

Note: Bedliner panel may have to be removed.




2.

Squeeze the top edge of the black plastic insert down to release the top two locking tabs




3.

Remove the plastic insert by pivoting it on the bottom edge.

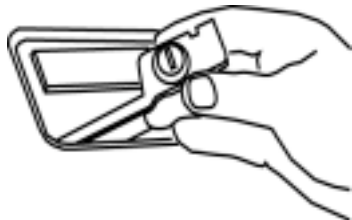

4.

Insert the POP&LOCK bracket at an angle on the drivers side and push it all the way to the left to clear the actuating rod on the passenger side

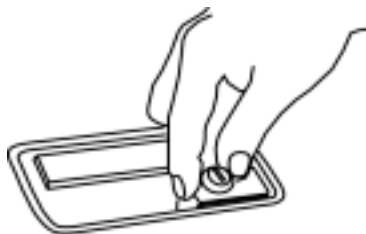

5.

Now slide the POP&LOCK to the right so that the mounting bracket is positioned under the actuating rod on the passenger side.

Insert the bolts and washers and capture the bracket loosely with just a few turns of the bolts..



6.

Slide the plastic insert in and click it into place.



7.

Tighten the mounting bolts.