





## Poly Taf SideWall Installation Instructions

7 ft (2,13 m) High x 10 ft ( 3,05 m) Wide Poly Taf SideWalls for DisplayShade<sup>®</sup>, Classic<sup>™</sup>, Aluma<sup>®</sup> and Aluma Shade<sup>®</sup>


1. Set-up your Caravan<sup>®</sup> Canopy frame and top as instructed in owner's manual. Do not fully extend the frame legs to desired height. Be sure to have the frame legs squared up in the upright position in order to attach the side walls correctly.
2. Lift the canopy top on the frame corner above the velcro area to be level with the top bracket (pic #1).
3. In a clean and open area, unwrap the side wall packages. Place side wall in correct position to attach. The Caravan<sup>®</sup> label should be in the upper right hand corner of the side wall (pic #2). Not all of your walls have a logo patch. There are vertical velcros that are at the top of the side wall.
4. Align the top of the side walls to the bottom of the velcro, but above slider bracket, while attaching velcro straps. Be sure to align the velcro straps in an alternating manner at different levels so that the velcro straps do not overlap from one wall to another (pic #3). Then fold the corner of the canopy top back over the frame securely.
5. Attach all velcro straps to the lower frame truss bars (pic #4).
6. Extend the frame legs to the desired height adjustment (pic #5).
7. Attach all of the horizontal velcro straps to the frame leg. Be sure frame legs are fully set into the squared position in order for all the side walls to attach properly (pic #6).
8. Your Caravan<sup>®</sup> Canopy side wall is now installed for your enjoyment (pic #7).

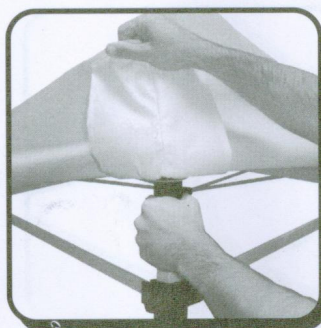


#1

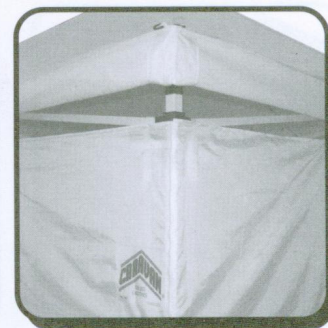

#2

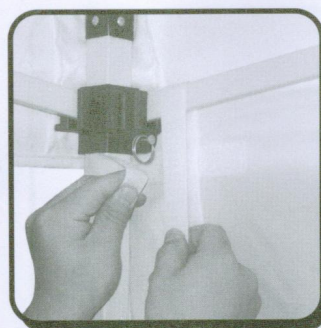


#3

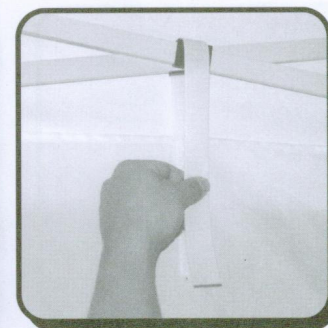

#4



#5

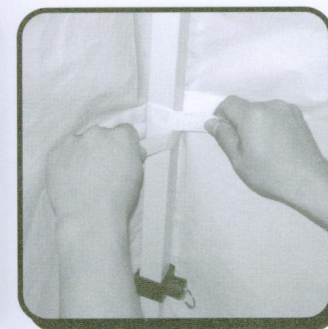

#6



#7