

## 05-09 Mustang Xtreme Window Switch Plate Install



Using a smooth flat headed screw driver gently pry up on the plastic switch plate. There are two clips holding it place.



The top plate will separate from the bottom piece as shown.



Remove the electric switch from the switch plate by gently prying against the retaining tabs on each side.



Window switch removed from switch plate.



Grasp the lower part of the arm rest and pull away from the door panel as shown.



Place the billet window switch plate on top of the lower arm rest pad as shown and align it properly.



From the underside snap the window switch into the billet switch plate.




Using the supplied hardware tighten down the switch plate to the lower arm rest. Do not over tighten.



Tighten the front bolt the same as the first one.



Line up the round alignment tabs at the bottom of the arm rest pad and press back into place.

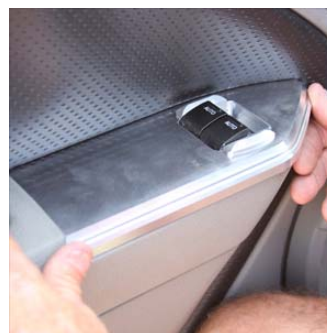

Driver side complete. Repeat steps on passenger side.