

## Y12591 & Y12592 Curved Charcoal Reception Desk Assembly Instructions



CH2960 & CH2972



### List of Hardware:

Part	Part
 Wood Dowel	 Cap
 Cam Pin	 Leveling Glide
 Cam Lock	 Grommet
 Glass Bracket	 Screws & Washers for Glass Brackets

**Tools Needed:**  
-Phillips Screwdriver  
- A helper!

- 1.) Assemble on carpet or cardboard to protect parts during assembly. Assemble in area of use. Requires 2 people for safety during assembly.
- 2.) Lay out Curved Front Panel, Side Panels and Desktop and insert all cam locks, cam pins and wood dowels.
- 3.) Then, attach one of the Side Panels to the Curved Front Panel, inserting the cam pins into the holes for the cam locks. Use your screwdriver to twist the cam locks to tighten.
- 4.) Next, attach the Desktop to the Curved Front Panel and Side Panel.
- 5.) Attach the remaining Side Panel to the Curved Front Panel and Desktop.
- 6.) Now, attach all three Glass Brackets to the top edge of the Curved Front Panel using screws & washers provided.

View from underside to show hardware connections

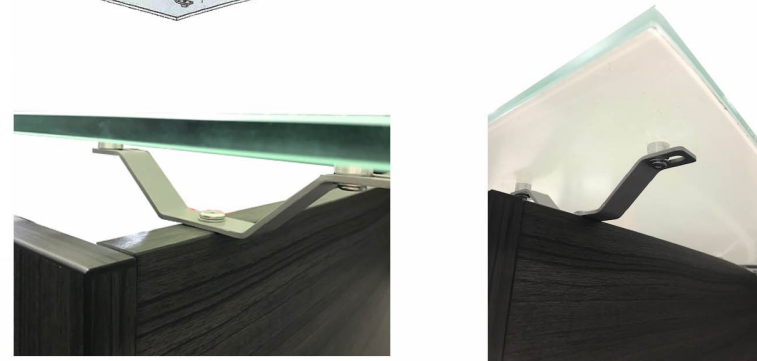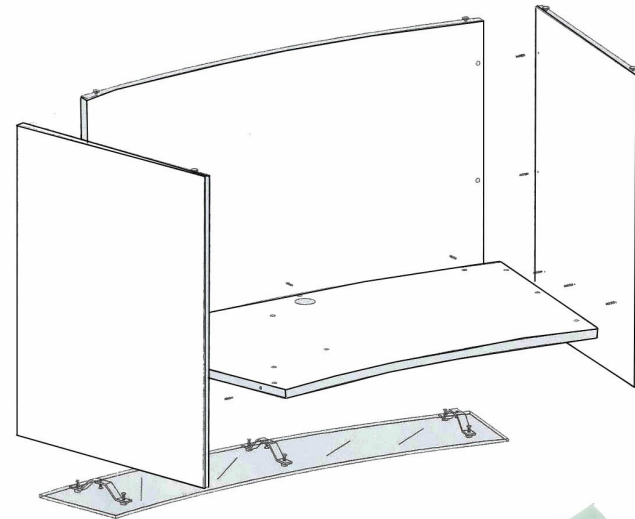

- 7.) With a helper, carefully place the glass on top of the brackets. Line up the spacers adhered on the glass over the holes in the brackets. Have one person hold the glass in place while the other person uses the screws and washers to attach.
- 8.) Your last step is to add the grommet to the desktop and cover the cam locks with the caps/stickers provided.

Questions? Please call 1-800-443-5117.  
Customer Service available 8:30 - 5:00 Central Time, Monday - Friday