

397RNF-3 / 397RNV-3 - Mobile Flip Chair Assembly Instructions (With Optional Chromed Arm)

Parts Listing

A



4 pcs for Installing Cap

B



2 pcs for Back

C




Backrest - 1 pc

D



Seat - 1 pc

E

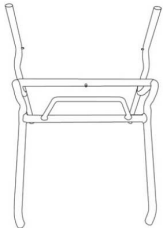


Steel Frame - 1 pc

F



Caster - 4 pcs

G

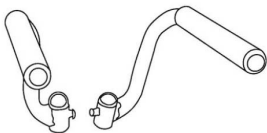


AF-02 Chromed Arm - 1 pair (Optional)

H




Chromed Screw - 2 pcs (Optional)

I



Cap - 1 pc

Step 1

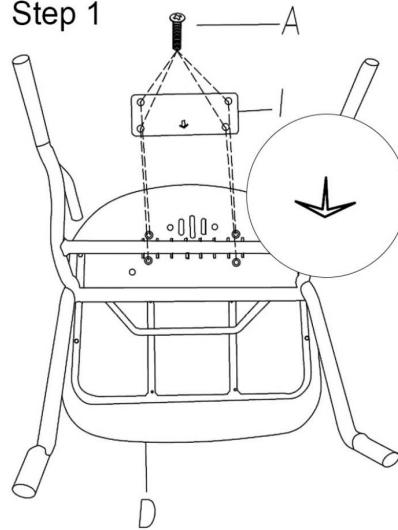


Tools needed : Phillips Screwdriver

Step 1 : Attach (E) Steel Frame to the notch of (D) Seat (back of seat) and put (I) Cap (watch arrow direction) by using four (A) screws, screwdriver and then fully tighten screws.


Step 2 : Snap four (F) Casters into (E) Steel Frame by hand. Attach (G) Chromed Arm on the rear tube of (E) Steel Frame.

Step 3 : MUST HAVE ARM TOUCH THE STOP PIN ON BOTH SIDE OF THE REAR TUBE and use two (H) Chromed Screws into the hole, which is right on top of the stop pin. Then place (C) Backrest on top of (E) Steel Frame. Line up the two holes on the back of the (C) Backrest and connect using the two (B) Screws. In the end, fully tighten all screws.

Step 2

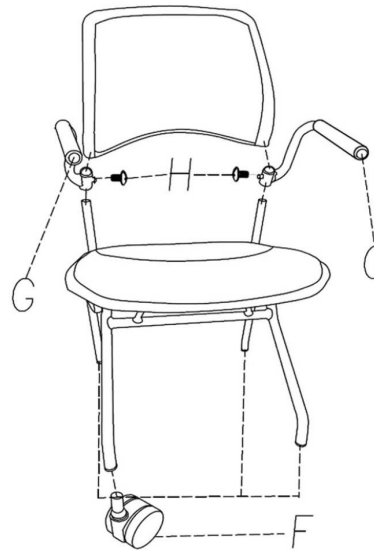

Step 3

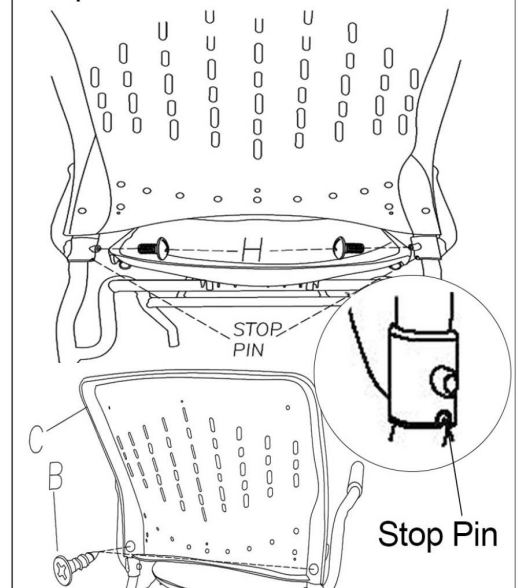

Questions? Call Customer Service at 1-800-443-5117
Monday - Friday 8:30 AM to 5:00 PM Central Time