


Y9443





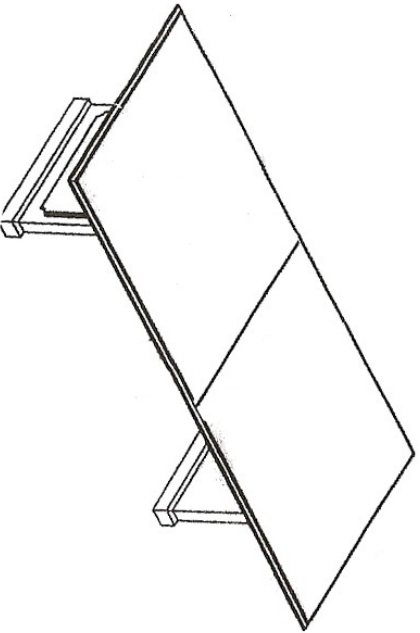

## Franklin Traditional Table



### ASSEMBLY INSTRUCTIONS

\*\*\*TIP: Assemble table on a carpeted floor for protection while assembling. You can also use the cardboard packaging as protection.\*\*\*\*\*

## PARTS LIST


Part	Qty.	Part	Qty.	Spare Qty.
 Wood Dowel	20	 Screw	6	
 Cam Post	16	 Leveler	4	
 Cam Fastener	16			
 Cap	16			

Tools Needed:

- Drill
- Phillips Screwdriver


- 1.) Identify the 3 table bases. The two end bases will have 2 holes for the metal inserts on one side (the side without the wood mouldings). The end bases are interchangeable. Your center base will have 2 holes on both sides of the base. Arrange the bases accordingly.
- 2.) Using the small brackets on the end bases, center the small brackets over the grooved cut-outs at the end of each base. The drill 4 screws in the center of each bracket to connect the bracket to the legs.
- 3.) Do the same for the center base, only using 2 of the large brackets. (Special Note: Your hardware pack may have more than 2 large brackets. You only need 2)

## Step 2

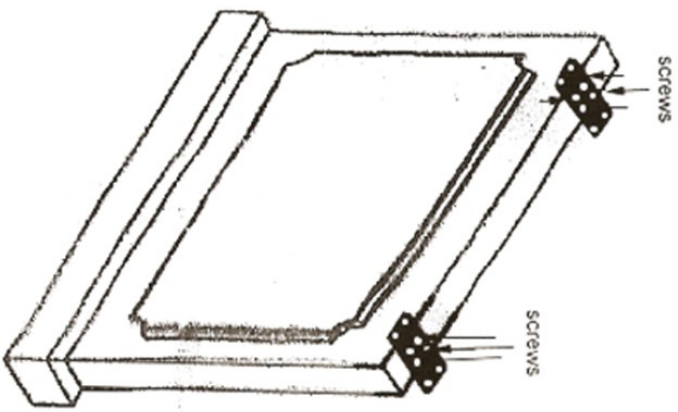

4.) Next, put the metal inserts into the holes of the bases and place the cam locks into the pre-drilled holes of the support beams. Line up the holes of support beams to the bases so that the inserts go into the support beam holes. Once in place, tighten the cams with a Phillips screwdriver by turning until locked and secured into place.

## Step 4.)

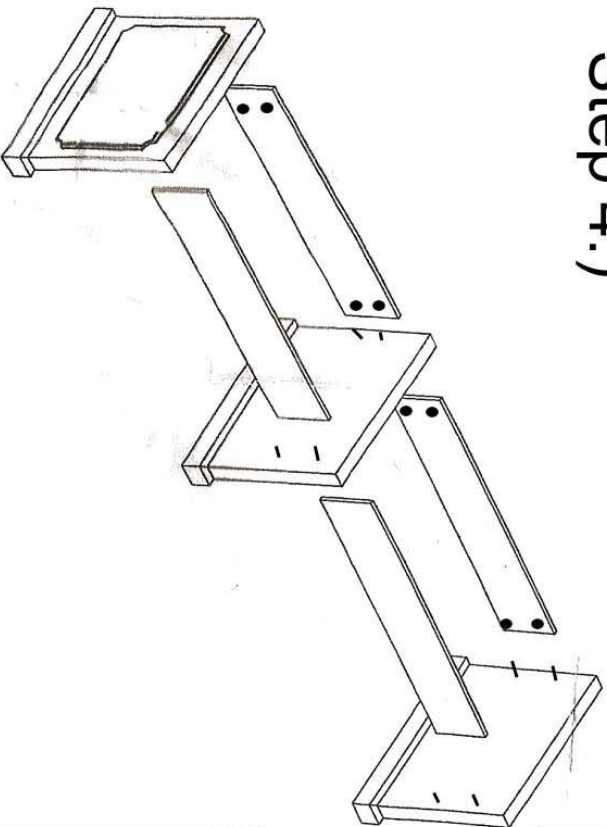

- 5.) Next, place all of the wooden dowels into the holes on the bases and support beams. The dowels will line up with the holes on the underside of the table tops.
- 6.) Then, using two people, take each table top and line up the dowels with the holes on top of the bases and support bars and set on top of the base assembly, butting up the table tops as far as they can go.
- 7.) Your next step is to take the remaining screws and drill them upward into the undersides of the table tops from the table base brackets. You will be using the 4 holes on the outside edges of the brackets.
- 8.) Lastly, cover the cams with the plastic caps provided.

## Step 7:

