









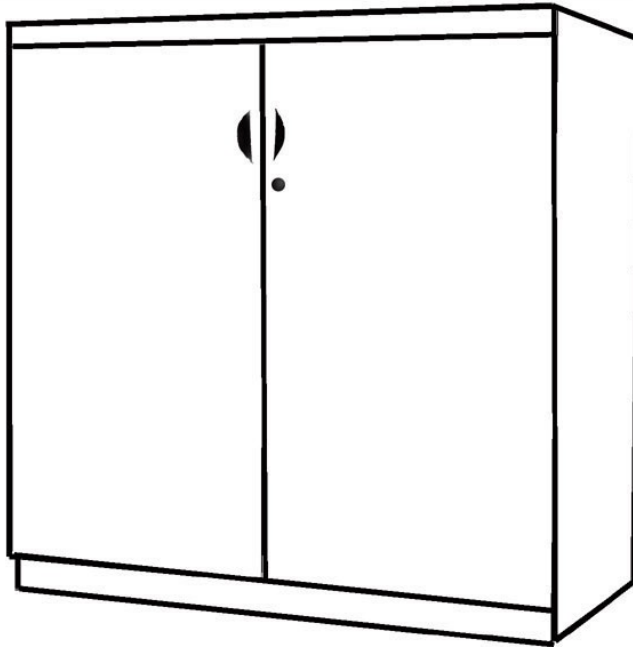


2-Door Cabinet Assembly Instructions



Applies towards

MJ/FL/ML/WH2013/2052

PARTS LIST

| Part | Part |
|---|---|
| <p>A</p>  <p>Wood Dowel</p> |  <p>Shelf Pin</p> |
| <p>B</p>  <p>Cam Post</p> |  <p>Plunger Lock</p> |
| <p>C</p>  <p>Cam Fastener</p> |  <p>Leveling Glide</p> |
|  <p>Drawer Pull & Screws</p> |  <p>Shallow Cover</p> |
|  <p>Lock & Key Set</p> |  <p>Deep Cover</p> |


You should also have
4 hinges, with screws
included.



Screws for hinges
are located inside
the hinges

1.) First step, lay all of the panels out and attach/insert the hardware. Cam Posts (or Cam Pins) fit in the smallest holes. Wooden dowels fit in the larger holes. Cam Fasteners (or Cam Locks) fit in the holes adjacent to the Cam Posts. Attach 4 leveling glides to the Left & Right panels. Also attach the hinge plates to the Left & Right side panels, as attaching the hinges to the doors. The holes for the hinge plates will be piloted toward of front of the left & right side panels. Leave screws somewhat loose for ease of adjustment later on. Lastly, attach the door pulls to the doors using the screws provided. Save attaching the locks for the last step.

Y10407/WH2013 White 2-Door Cabinet will not have a kickplate

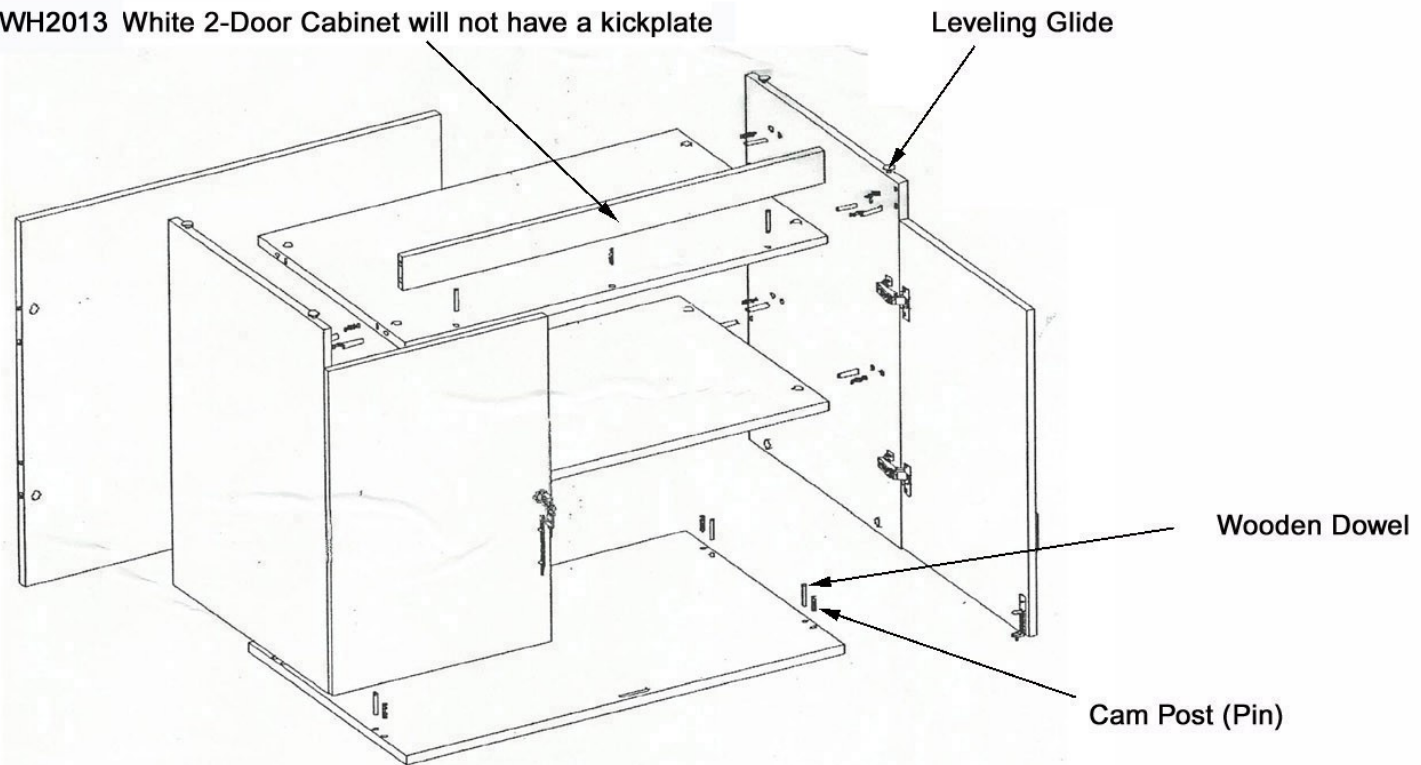

Other Tips:

-A second person may be handy to help hold some of the panels in place during assembly and to help turn the unit over once assembled.

-Assemble in a carpeted area near where the unit will be used.


-You will need a Phillips Screwdriver to assemble this product.

- 2.) Assemble unit by laying the back panel, finished side down on the floor. Then, attach the right side panel (2) using the cam posts, fasteners and dowels provided.
- 3.) Next, attach Bottom Panel, Center Shelf and Kickplate using same hardware provided.
(Skip kickplate step if assembling Y10407)
- 4.) Now, attach Left Side Panel using same hardware.
- 5.) Attach the Top Surface using same hardware. The shell of the unit should now be complete. Carefully turn the unit upright.
- 6.) Mount the shelf using the Shelf Pins included.
- 7.) Your next step is to attach the doors using the hinges. Attach the hinges to the doors if you have not done so already. You will need to align the doors by turning the set screw with your Phillips screwdriver. See diagram below.
- 8.) Your last step is to attach the lock. Attach the lock core with the wood screws provided. Attach the Plunger Lock on doors as shown, again using wood screws provided. The plunger should align with the routed out hole in the underside of the Top Surface.

To lock doors: Close door with plunger lock and push in Plunger. Close the other door and turn the key.

To unlock: Turn the key to unlock first door, then hit the red button on the Plunger Lock to release the plunger.

Order of Panel Assembly:

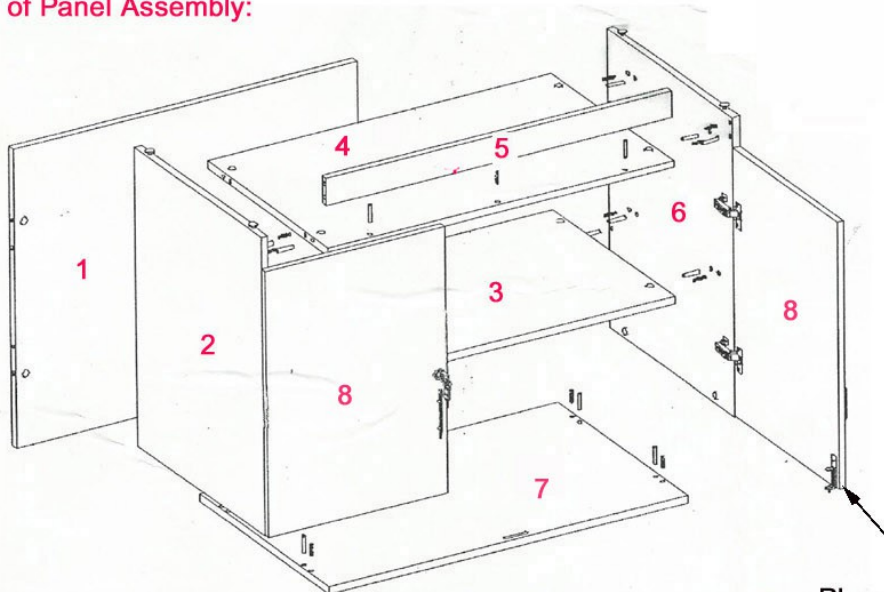

Plunger Lock

