


Y9769 - Executive Deep Cushion Office Recliner Chair Assembly Instructions

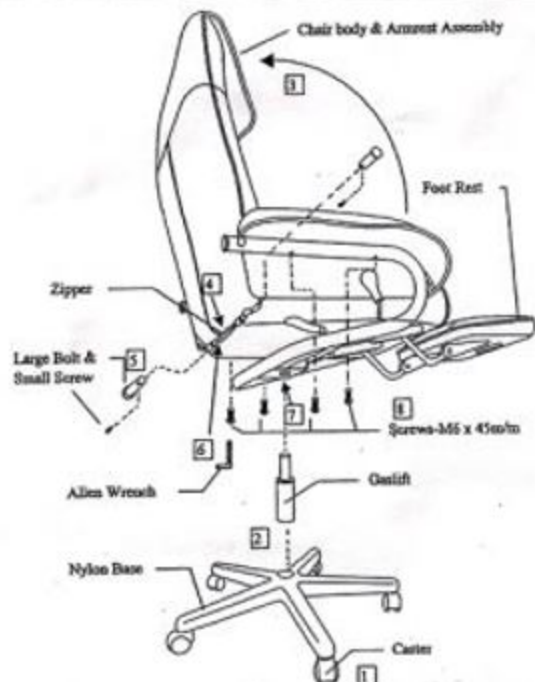

Contents:

Parts	Q'ty	Hardware	Q'ty
Chair Body assembly	1	Large Bolt	2
Foot Rest	1	Small Screw	2
Gaslifter-height adjuster	1	Allen Wrench	1
Nylon Base	1	Scews-M6x45 m/m	4
Casters	5		

Instructions:

Before starting, please read instructions carefully.

Step A Insert the 5 Casters into the outer holes on the Base(1).(we recommend using a rubber hammer.),then insert the bottom end of the gaslifter into the centerhole on the Base (2).

Step B Secure the Chair Body by lifting the seat back into a flat or vertical position (3). Unzip the back of the seat at the fold (4) if it's is zipped. Line up the single well on the back frame between the 2 wells on the seat frame (5),secure with 2 large bolts using 2 small screws. Tighten with Allen Wrench and close Zipper (6).

Step C Place the Chair Body on top of the Gaslifter(7). (Make sure the top of the Gaslifter has been properly fitted into the hole in the flange on the bottom of the chair frame).

Step D Place the Armrest on top of slope tube,screw it up with attached Screws-M6x45m/m 4 pcs(8)

Step E There are 4 recliner positions. To adjust the back position,push the lever(located on the right as you sit in the chair) outward from the chair seat and push chair back to desired position.

TO EXTEND FOOTREST



1. With fingertips, find plastic handle under Footrest.



2. Lift Footrest out and up until it locks into position. Swivel footrest forward.

TO STORE FOOTREST



1. Grasp the Footrest in the center and pull forward to a vertical position.



2. Push the Footrest down and backward until it is completely under the seat.

ASSEMBLY NOTES:

During assembly, hand tighten screws only. When all screws are in place, you may then tighten all screws completely.

CAUTION: 1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.