


Y13015 - Y13017 - Countertop Sneeze Guard with Side Wings Assembly Instructions


Hardware:




Crown Cap Nut - Qty 10

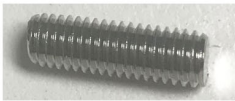


Set Screw - Qty 10

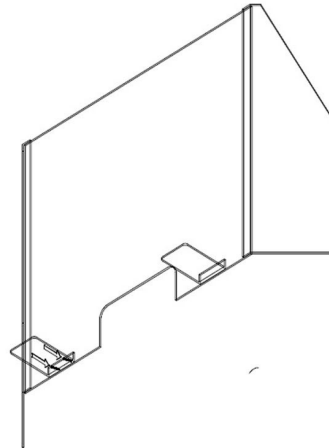

1.) Attach one of the Side Wings using three sets of the Set Screws and Crown Cap Nuts provided.

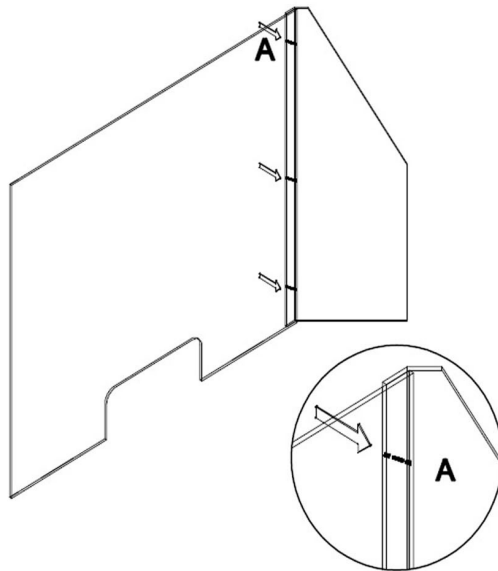

2.) Repeat this process for the other Side Wing.

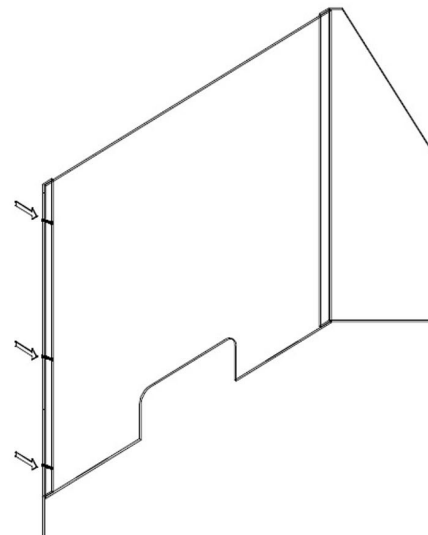

3.) Attach Support Feet with two sets of Set Screws and Crown Cap Nuts for each foot.

