




INSTALLATION INSTRUCTIONS Rear Bumper: for Polaris Ranger XP® 900

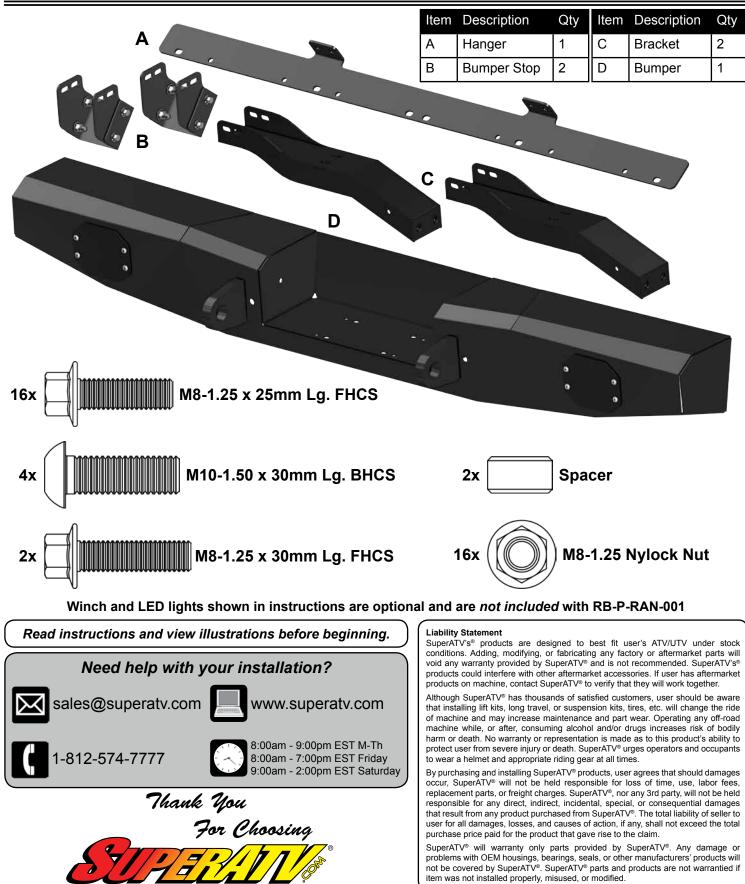


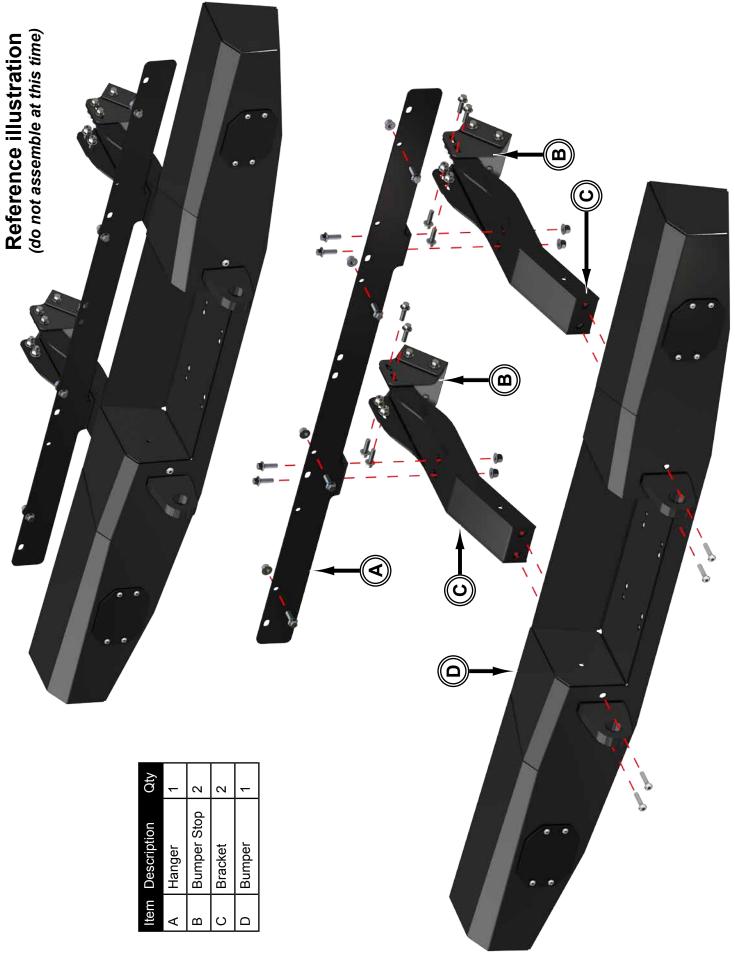



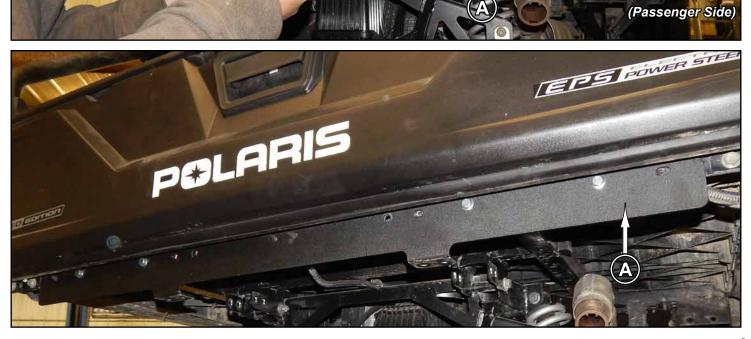

- Install Brackets (C) to Hanger (A) with hardware shown.
- Secure Brackets (C) and Bumper Stops (B) to Frame with hardware shown.

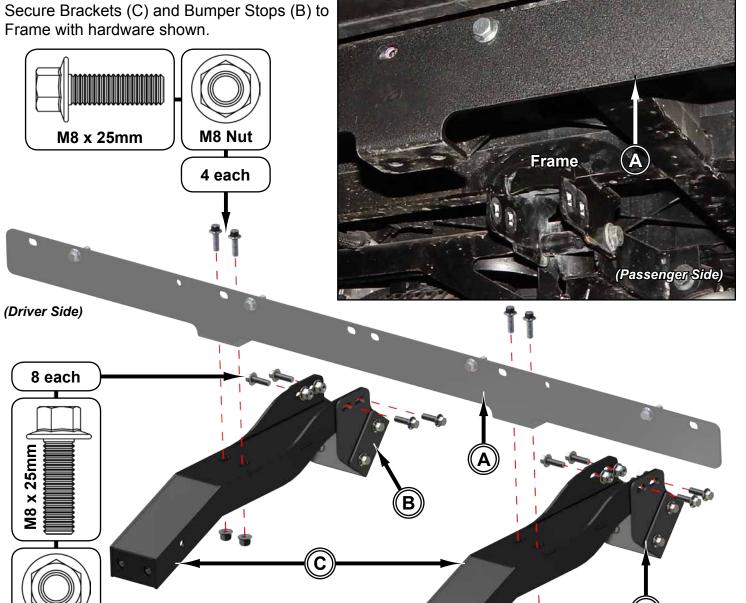




M8 Nut

В


- Install Bumper (D) to Brackets (C) with hardware shown.

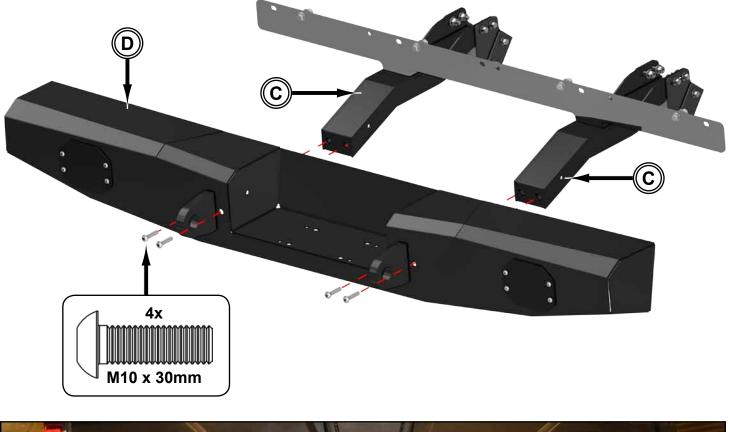






- Open Bed and tighten Bed Stops (B) hardware.
- For machines with large tires, open Bed until Bumper interferes with Tires. Adjust Bed Stops (B) until clearance is achieved and tighten hardware.

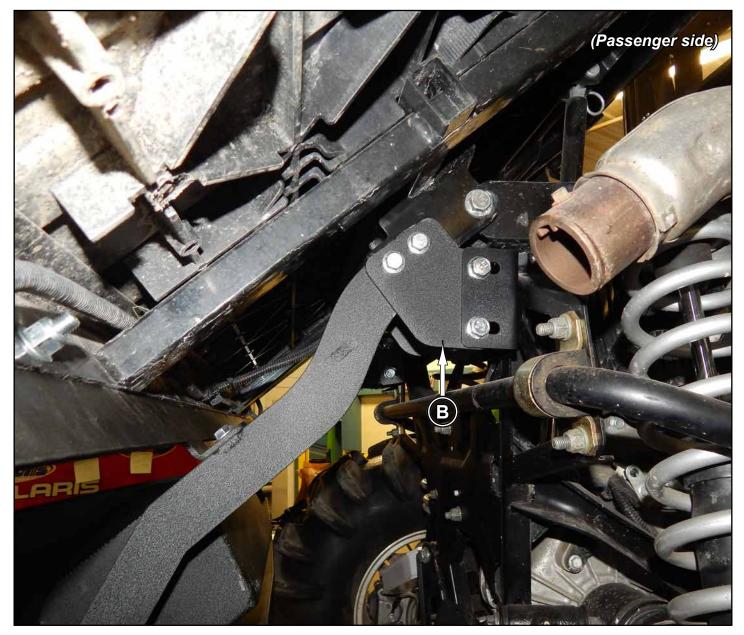


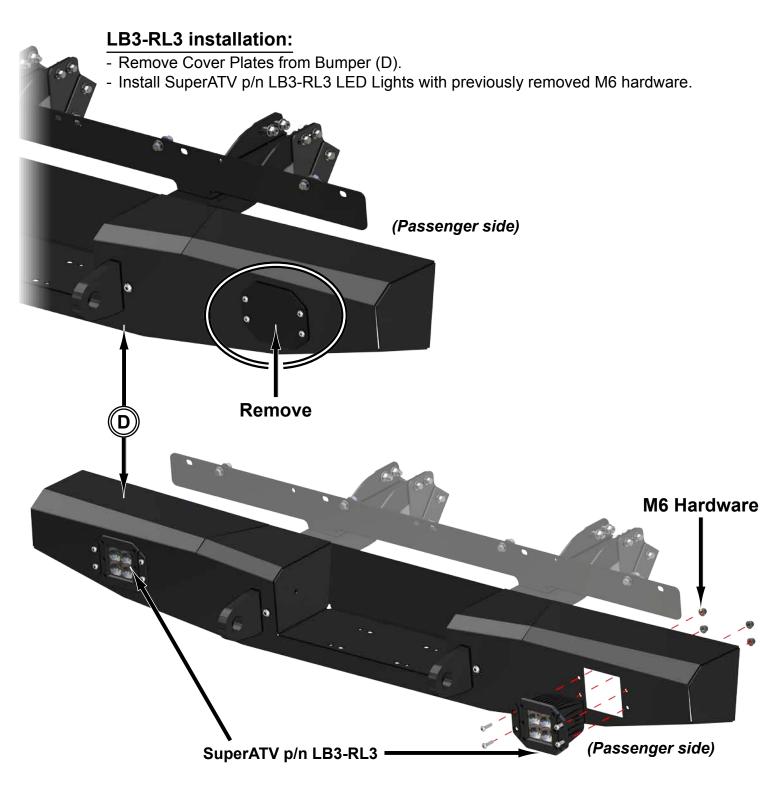

See IN-LB3-RL3 for wiring instructions.

LB3-12 installation:

- Remove brackets and hardware from light bar.
- Install SuperATV p/n LB3-12 LED Light with provided hardware and Spacers.

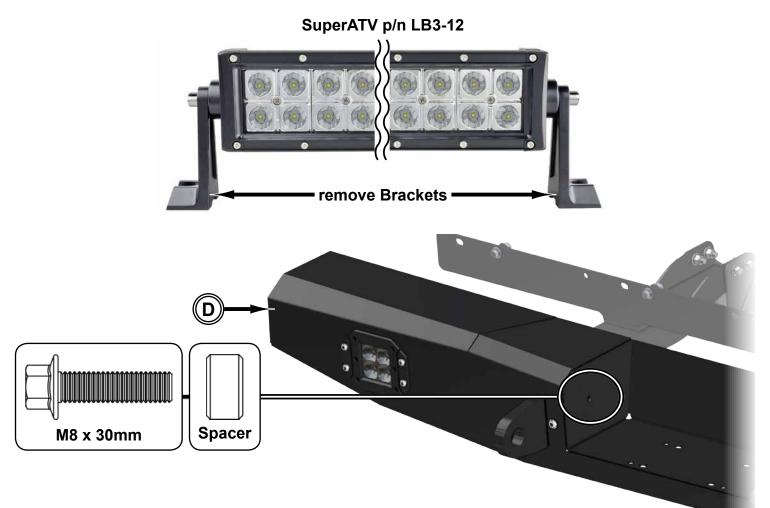


See IN-LB3-12 for wiring instructions.



IN-RB-P-RAN-001

3500-W-N-1 installation:

- Install SuperATV p/n 3500-W-N-1 to Bumper (D).

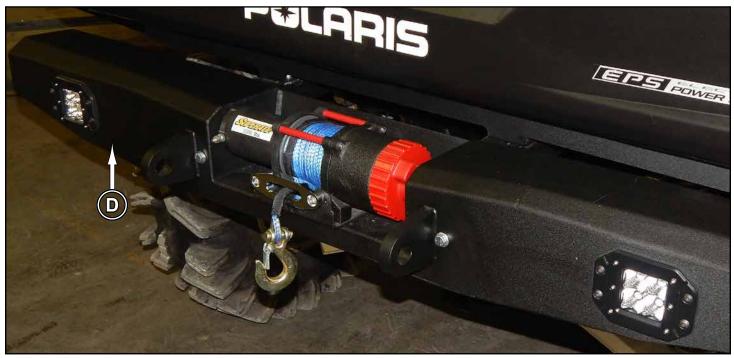

Install Winch to Bumper (D) with components and hardware supplied with Winch.



See Winch instructions for additional installtion instructions.