



**NORTH SHORE  
COMMERCIAL DOOR**.COM  
162 Edgewood Street Elyria, Oh 44035  
P: 800 783 6112 • F: 440 365 3514

support@northshorecommercialdoor.com

## Xcluder™ Pest Control Door Sweep Installation Instructions

Use for Part #s: 162600, 162602, 162604, 162608, 162620, 162622, 162624, 162628, 162638, 162640,



Thank you for your purchase of an Xcluder™ Pest Control Door Sweep, the best way close the door on unwanted pests.

### Tools Required:




1. Phillips head screwdriver
2. 1/4" nut driver — Commercial Sweeps Only (Part #s: 162602, 162622, 162640)
3. Drill and 7/64" bit
4. Hacksaw — *only needed if the sweep needs to be trimmed to fit*
5. Sturdy scissors — *only needed if the sweep needs to be trimmed to fit*

### Installation Instructions:

1. Sweep should be mounted on the outside of the door
2. Measure door and cut sweep to fit. This step may not be necessary. If cutting is required, cut excess material from the end of the sweep that will be on the hinged side of the door.
3. When cutting the sweep, best results are obtained by first using a hacksaw to cut through the aluminum retainer and then sturdy shears to cut the rubber and Xcluder™ filling. NOTE: Sawing through the Xcluder™ filling is not recommended.
4. Using the end of the sweep with the metal end guards already installed as a model, install the end guards on the opposite end of the sweep:
  - a. Using a standard screwdriver, gently separate Xcluder™ filling from the metal mesh in a 1/2" wide x 3/4" deep section at the middle of both faces on the sweep.
  - b. Place an end clip on it's side on a hard, flat, sturdy surface.
  - c. Hold the end guard and drive the standard screwdriver blade into the end guard at the looped end. This will separate the open end.
  - d. Place the opened end guard, flat side out, onto one of the edges of the door sweep in the location the Xcluder™ filling was separated from the metal mesh.
  - e. Holding the end guard in place with your thumb, pull the screwdriver from the end guard.
  - f. Using the screwdriver handle, tap the Xcluder™ end guard flush with the edge of the door sweep.
  - g. Repeat steps a-f for the remaining unguarded door sweep edge.

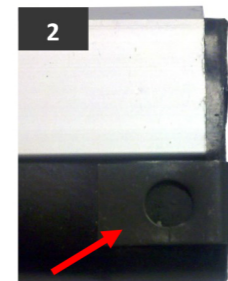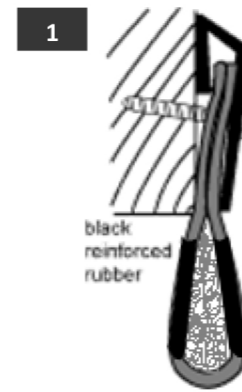

Pre-installed End Guard  
**DO NOT TRIM THIS END**

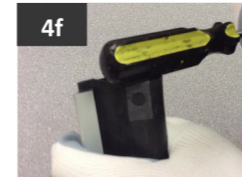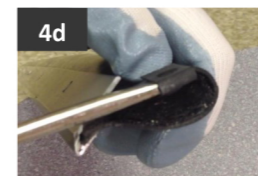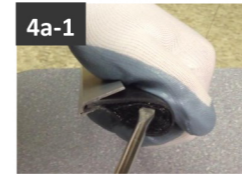

Version—BG1, 4-25-16



**NORTH SHORE  
COMMERCIAL DOOR**.COM  
162 Edgewood Street Elyria, Oh 44035  
P: 800 783 6112 • F: 440 365 3514

support@northshorecommercialdoor.com

## Xcluder™ Pest Control Door Sweep Installation Instructions

Use for Part #s: 162600, 162602, 162604, 162608, 162620, 160622, 160624, 160628, 162638, 162640,

### Installation Instructions: (Continued)

5. Close door. Hold sweep at bottom of door. Tap down until contact is made between the sweep and the threshold.
6. Mark Screw Holes
7. Drill pilot hole for screws using a 7/64" bit
8. Attach sweep with the included stainless steel mounting screws Adjust sweep position so sweep does not impede proper closing and latching of door.  
**IMPORTANT:** Make sure the door sweep makes even contact with the threshold or floor across its width

Version—BG1, 4-25-16