


COMMERCIAL THRESHOLD


Applies to the following thresholds: **573x5_FG**

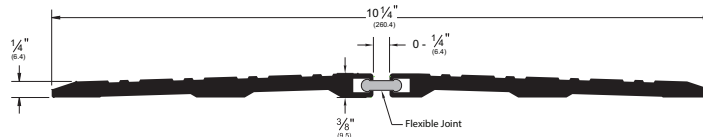

Testing/Ratings:




Tools Required:

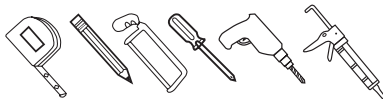

Installation Instructions:

Top (plan) view of door opening (out-swing type)

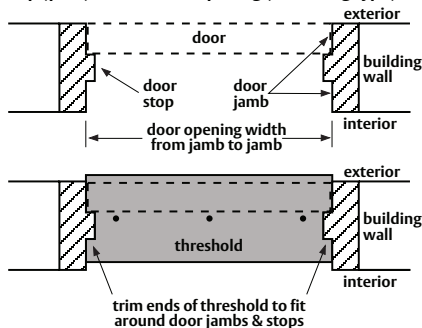

USED AS A TRADITIONAL SADDLE:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops.
3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

USED AS AN EXPANSION JOINT COVER:

1. Place threshold in desired position.
2. Drill pilot holes through pre-drilled holes in threshold on stationary side of application.
3. Caulk ends of threshold and under full length of legs on stationary side of applications.
4. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

NOTE: In this application one side will be free-floating to allow for the expansion and contraction of the expansion joint.

NOTE:

This threshold is designed with a flexible joint to allow its use in several different applications. Installation may differ from those outlined above and should be installed as is appropriate for your application.

