


Fox Body Billet Fuel Door Installation (79-93)

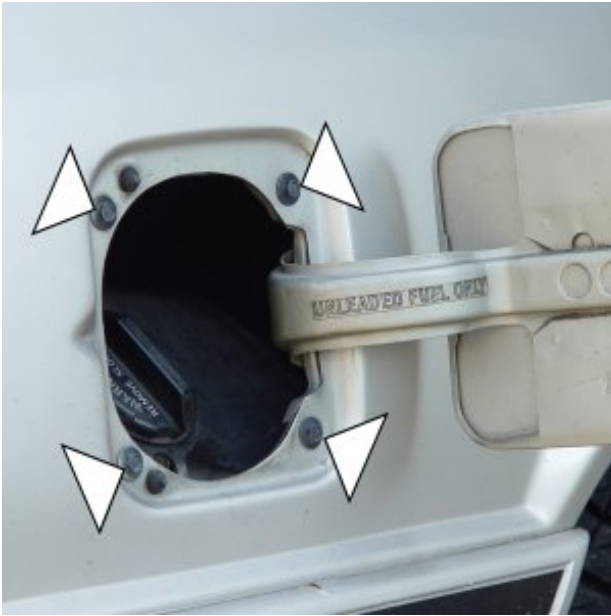

Remove the factory fuel door from the vehicle by removing the four retaining bolts.



Remove the rubber fuel door stops.

NOTE: Some year cars may require the bottom rubber stop hole to be enlarged using a 5/16 drill bit.



Center the new fuel door. Fasten the fuel door in place using the supplied nylon locking nuts and washers from the back side of the door. The finished Billet Fuel Door...