

## 05-10 Mustang Billet Battery Tray Installation



Remove the stock battery, then remove the three 5/16" headed bolts holding the factory battery tray in place.



Take the three aluminum pedestals and screw them into the factory battery tray mounting points. One long one goes in the lower mounting point, the two short ones on the left.



Next take the lower part of the tray and install the legs for the battery tray hold down. There is a recess in the tray for the legs and use the countersunk screws from the bottom of the tray to secure.




Tighten each of the countersunk screws with the provided allen key.




All the legs installed. Some models only use three.



Place the assembled tray into position making sure to line up the three mounting holes with the pedestals installed earlier.

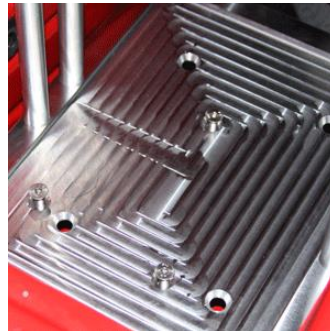

Use three of the countersunk screws to hold tray in place.

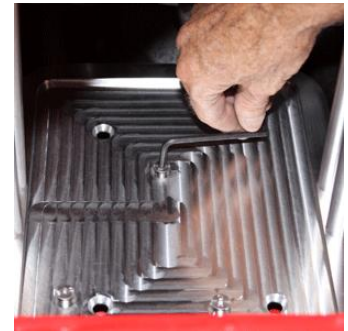

Tighten battery tray down.



Install the factory battery and reconnect the terminals.



Place the top mounting bar in place and put the four socket head cap bolts.



Tighten the bolts down to secure the battery.



The finished installation.

Be sure to shop our online store for the best deals: [www.uprproducts.com](http://www.uprproducts.com)