


S020089,S020191,S020049,S020097,T001,T039
T005,T008,T009,T018,T027,S020036,S020138
S020110, S020193,T014,T020,T029,T037,T041

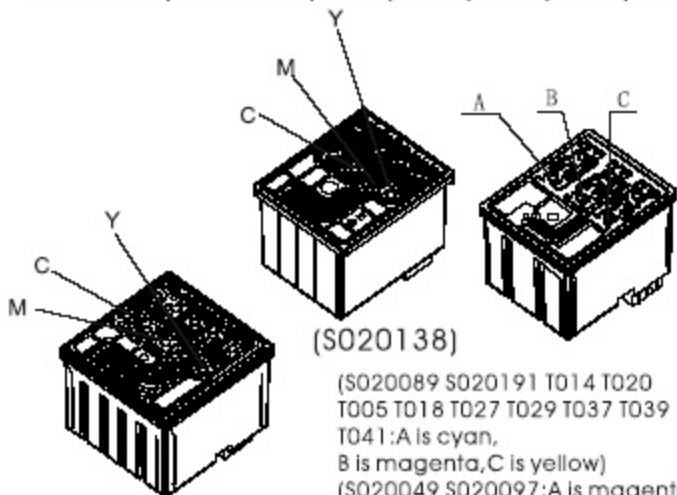

(S020110 S020193
T001 T008 T009)

(S020138)

(S020089 S020191 T014 T020
T005 T018 T027 T029 T037 T039

T041:A is cyan,

B is magenta,C is yellow)

(S020049 S020097:A is magenta,
B is cyan,C is yellow)

(S020036:A is yellow,B is cyan
C is magenta)

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Take out the cartridge, clean the outlet and seal it with sealing tape.
3. Tear off the label of the cartridge and expose the filling holes.
4. Assemble the syringe and needle. Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full (due to the different size of cartridge chamber, the ink filled should be between 5ml to 15ml), pull out the syringe
5. Clean the ink on the surface of the filling hole with tissue paper. Seal the filling hole with sealing tapes.
6. Put a tissue paper on the table, hold the cartridge (outlet face down) and hit it towards the tissue for 2-3 times in order to fill the outlet with ink.
7. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

EPSON MJ-830C/830CS/930C/6000C; EPSON STYLUS COLOR 400/600/800/800N/850/1520;EPSON STYLUS COLOR 440/460/640/660/670/740/760/860/1160EPSON STYLUS SCAN 2000/2500; EPSON MJ-500C/800C/850K/1500K/3000C/3000CU;EPSON STYLUS 1500/1500K; STYLUS COLOR II/ II s; EPSON STYLUS COLOR 1500;EPSON MJ-500/510C/510CS/610CS/810CS; EPSON STYLUS COLOR 200/500;EPSON STYLUS COLOR 900/900N/900G/980/980N;EPSON STYLUS COLOR 300;EPSON STYLUS COLOR 480/580/EPSON STYLUS C20/C40