

Instruction guide - Replacement of Avenger contact stick

Important update of Avenger. :

Lumapower has revised the battery tube by adding a plastic spacer at the end inside, it helps to prevent unconditional power on with clickie switch.

That spacer maybe 0.05mm thicker than our spec. and cause clickie's contact miss in contact with the battery in some cases.

The new contact stick with extend length can fit different length of battery and fix the above issue.



Contact Stick



Tweezer

Main Parts



(1)




(2)



(3)



(4)

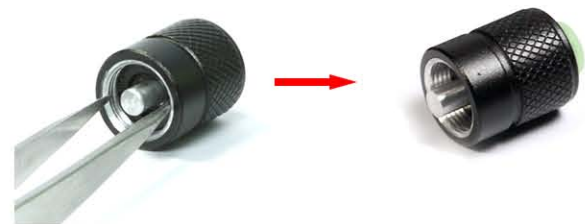

Procedures:

- (1) Refer to the Avenger mechanical drawing and picture, unscrew the Tail Switch in counterclockwise from the flashlight.
- (2) Refer to the Tail Switch picture, use a tweezer to unscrew the Contact Stick holder from Tailswitch by turning counterclockwise.
- (3) To take off the Contact Stick from the holder and install with a new Contact Stick firmly.
- (4) Screw in the Contact Stick holder to the Tail Switch until it's in firm position
- (5) Install battery
- (6) Screw in the Tailswitch and press the Pushbutton to switch on the light.
(If battery is full charged but the light does not switch on, do from Step (1) again and check. Make sure all the parts are in correct position)

**Specifications are subject to change without prior notice*

www.lumapower.com

Copyright © 2006-2007 Lumapower Technology Ltd. All right reserved.
"Lumapower" is a trademark of Lumapower Corporation Ltd.

LPOWER
UMA