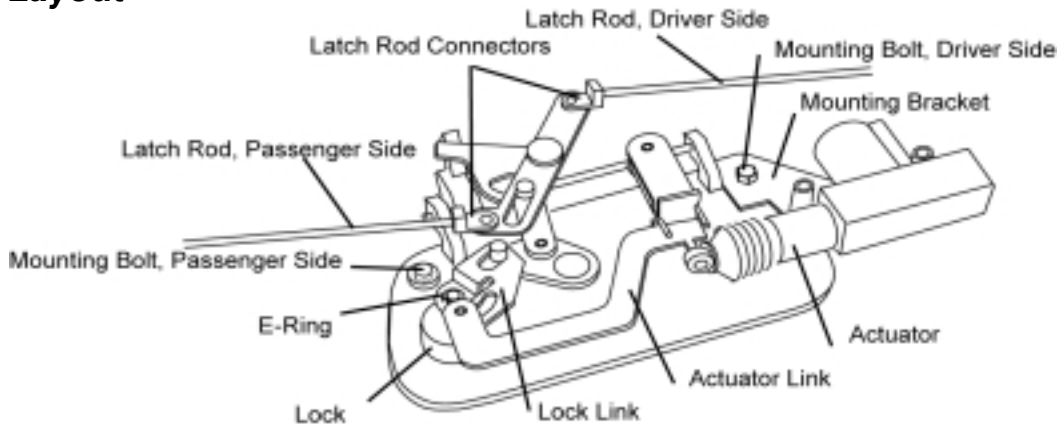


Model PL 8500 for the TOYOTA Tundra 2000

Layout



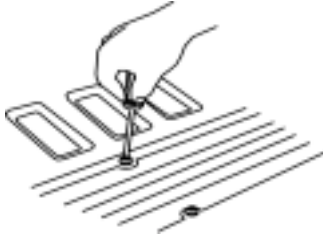
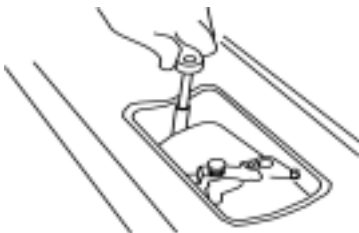

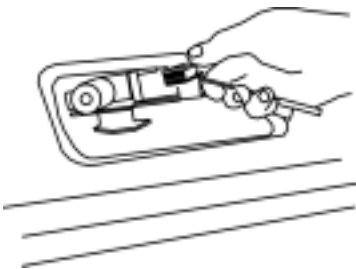
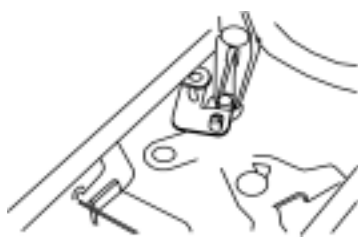



Parts Included:

Power Tailgate Lock Unit
Short Wiring Cable
Long Wiring Cable
Cable Ties
Blue Connector Taps

Tools Required:

Number T 30 Torx Driver
10 MM Socket
Pliers
Small Screwdriver

Installation:

<p>1. Remove Access Panel</p> 	<p>2. Unclip both Latch Rods, lay them to the side and remove the Driver Side Mounting Bolt</p> 	<p>3. Remove the E-Ring and the original Lock Link. Set the E-Ring aside.</p> 
<p>4. Slide the POWER UNIT in towards the driver's side.</p> 	<p>5. Position the new Lock Link on the shaft of the lock so that the white pin engages the slot. Reinstall the E-Ring. Reinstall the Mounting Bolt.</p> 	<p>7. Snake the Short Wiring Cable up a drainhole of the tailgate and connect it to the POWER UNIT maintaining green to green and brown to blue. Secure with a Cable Tie. Connect the other end to the Long Wiring Cable. Locate the connector so that it is accessible for tailgate removal. Run the Long Wiring Cable inside the left frame rail to the engine compartment and secure it with Cable Ties. Snake it into the driver's compartment using the lead through of the hood release cable shown below.</p> 
<p>8. Remove the left kick panel. Locate the Wiring harness leading to the left door and attach one of the blue connector taps to the Black/Yellow Striped wire and another one to the Blue/White Striped wire.</p> 	<p>9. Plug the Brown end of the Long Wiring Cable into the connector around the Black/Yellow Striped wire and plug the Green end into the connector around the Blue/White Striped wire.</p> 	<p>10. TROUBLESHOOTING. The best way to troubleshoot the unit is to take it out of the tailgate and bring it forward into the driver's compartment. Once you have the unit in front of you it will be easy to spot any mechanical malfunctioning and switch around any wiring connections.</p> <p>For Tech Support please call: 800 342 5911</p> 