

52' TP Series Tent Instructions



A world leader in manufacturing of engineered fabric products and distribution of event equipment.




5373 State Route 29, Celina Ohio, 45822
Phone: 419-586-3610; 866-438-8368 (Toll Free) Fax: 419-584-0949

52' TP Series Tent Instructions

1A. If using a Celina Tent TP pattern, place the pattern where you'd like the center of the tent to be. Measure out 26' from the center circle of the pattern. Pull the tape measure tight (making it as straight as possible) following the 6 lines projecting from the center circle. Make a mark at 26'. This is the placement of the front stake. Skip to step 2.

1B. If you are unable to use the TP Pattern then start where you'd like the center of the tent to be. Pull out 78' of tape. Have 1 person hold the 0 and 78' mark together. Using 2 other people have 1 grab the 26' mark and 1 grab the 52' mark. Have each person pull tight from the center and each other, until a triangle is made. Make marks at 26' and 52'. With the person in the middle just rotating around, move the tape to where the 52' is on the previous 26' mark. Have the person with 26' pull tight against the other 2 people. Make a mark at the new 26'. Continue around until there are 6 marks made. Move to step 2.

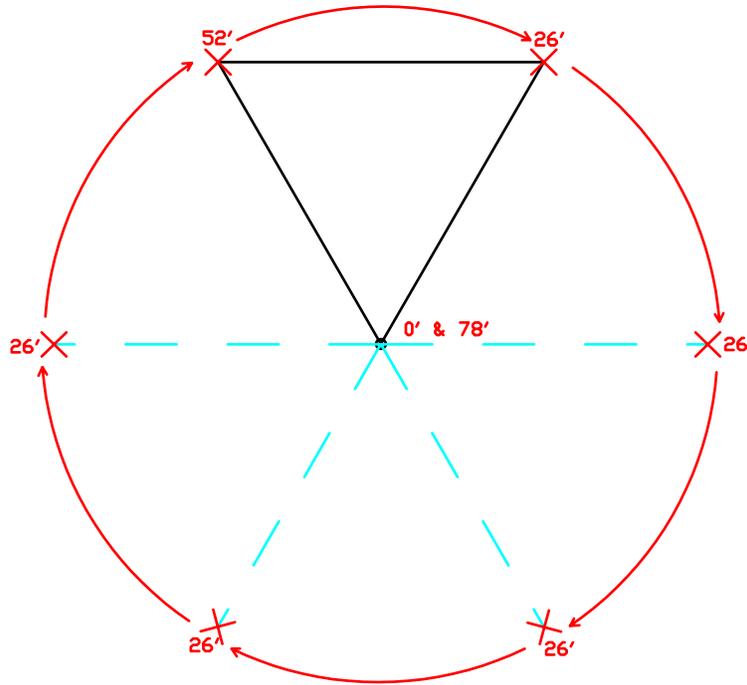

2. Set each box ratchet on the marks (26' out from the center), with the ratchet facing in towards the center of the tent. Place the stake plate on top of the box ratchet with the front hole over the hole on the box ratchet. Drive the stake all the way down until the bottom head is flush with the stake plate. Line the stake plate up with the center of the tent and drive a 2nd double head stake in the back hole. Drive the stake all the way down until the bottom head is flush with the stake plate. Continue around until all 6 sets of box ratchets and stake plates and secured with 12 stakes.

3. Feed the end of the tent straps attached to the tent top through each box ratchet. Turn the ratchet several times and secure loosely.

4. Insert the center pole tip through the center "O" ring assemblies; make sure that the pin is not caught on any part of the tent top. Push the center pole into a vertical position. Straighten the center pole so that it is setting straight vertically up and down.

5. Tighten all box ratchets. The perimeter of the tent should be taut.