2015+ Ford F-150

Installation Instructions – 2.7L & 3.5L EcoBoost Engines

Definitions:

DVCC – Dual Valve Catch Can
CSCC – Clean Side Catch Can
WOT – Wide-Open Throttle
VPS – Variable Pressure Sensor
OEM – Original Equipment Manufacture

Tools needed:

- Cordless Drill
- Thread Tape
- Razor
- Drill/Step Bit Set
- Wrench Set
- Ratchet & Socket Set
- Allen Keys (supplied)

Installation Questions or Sales Call: (561) 588-6630 or Email at: uprorders@gmail.com
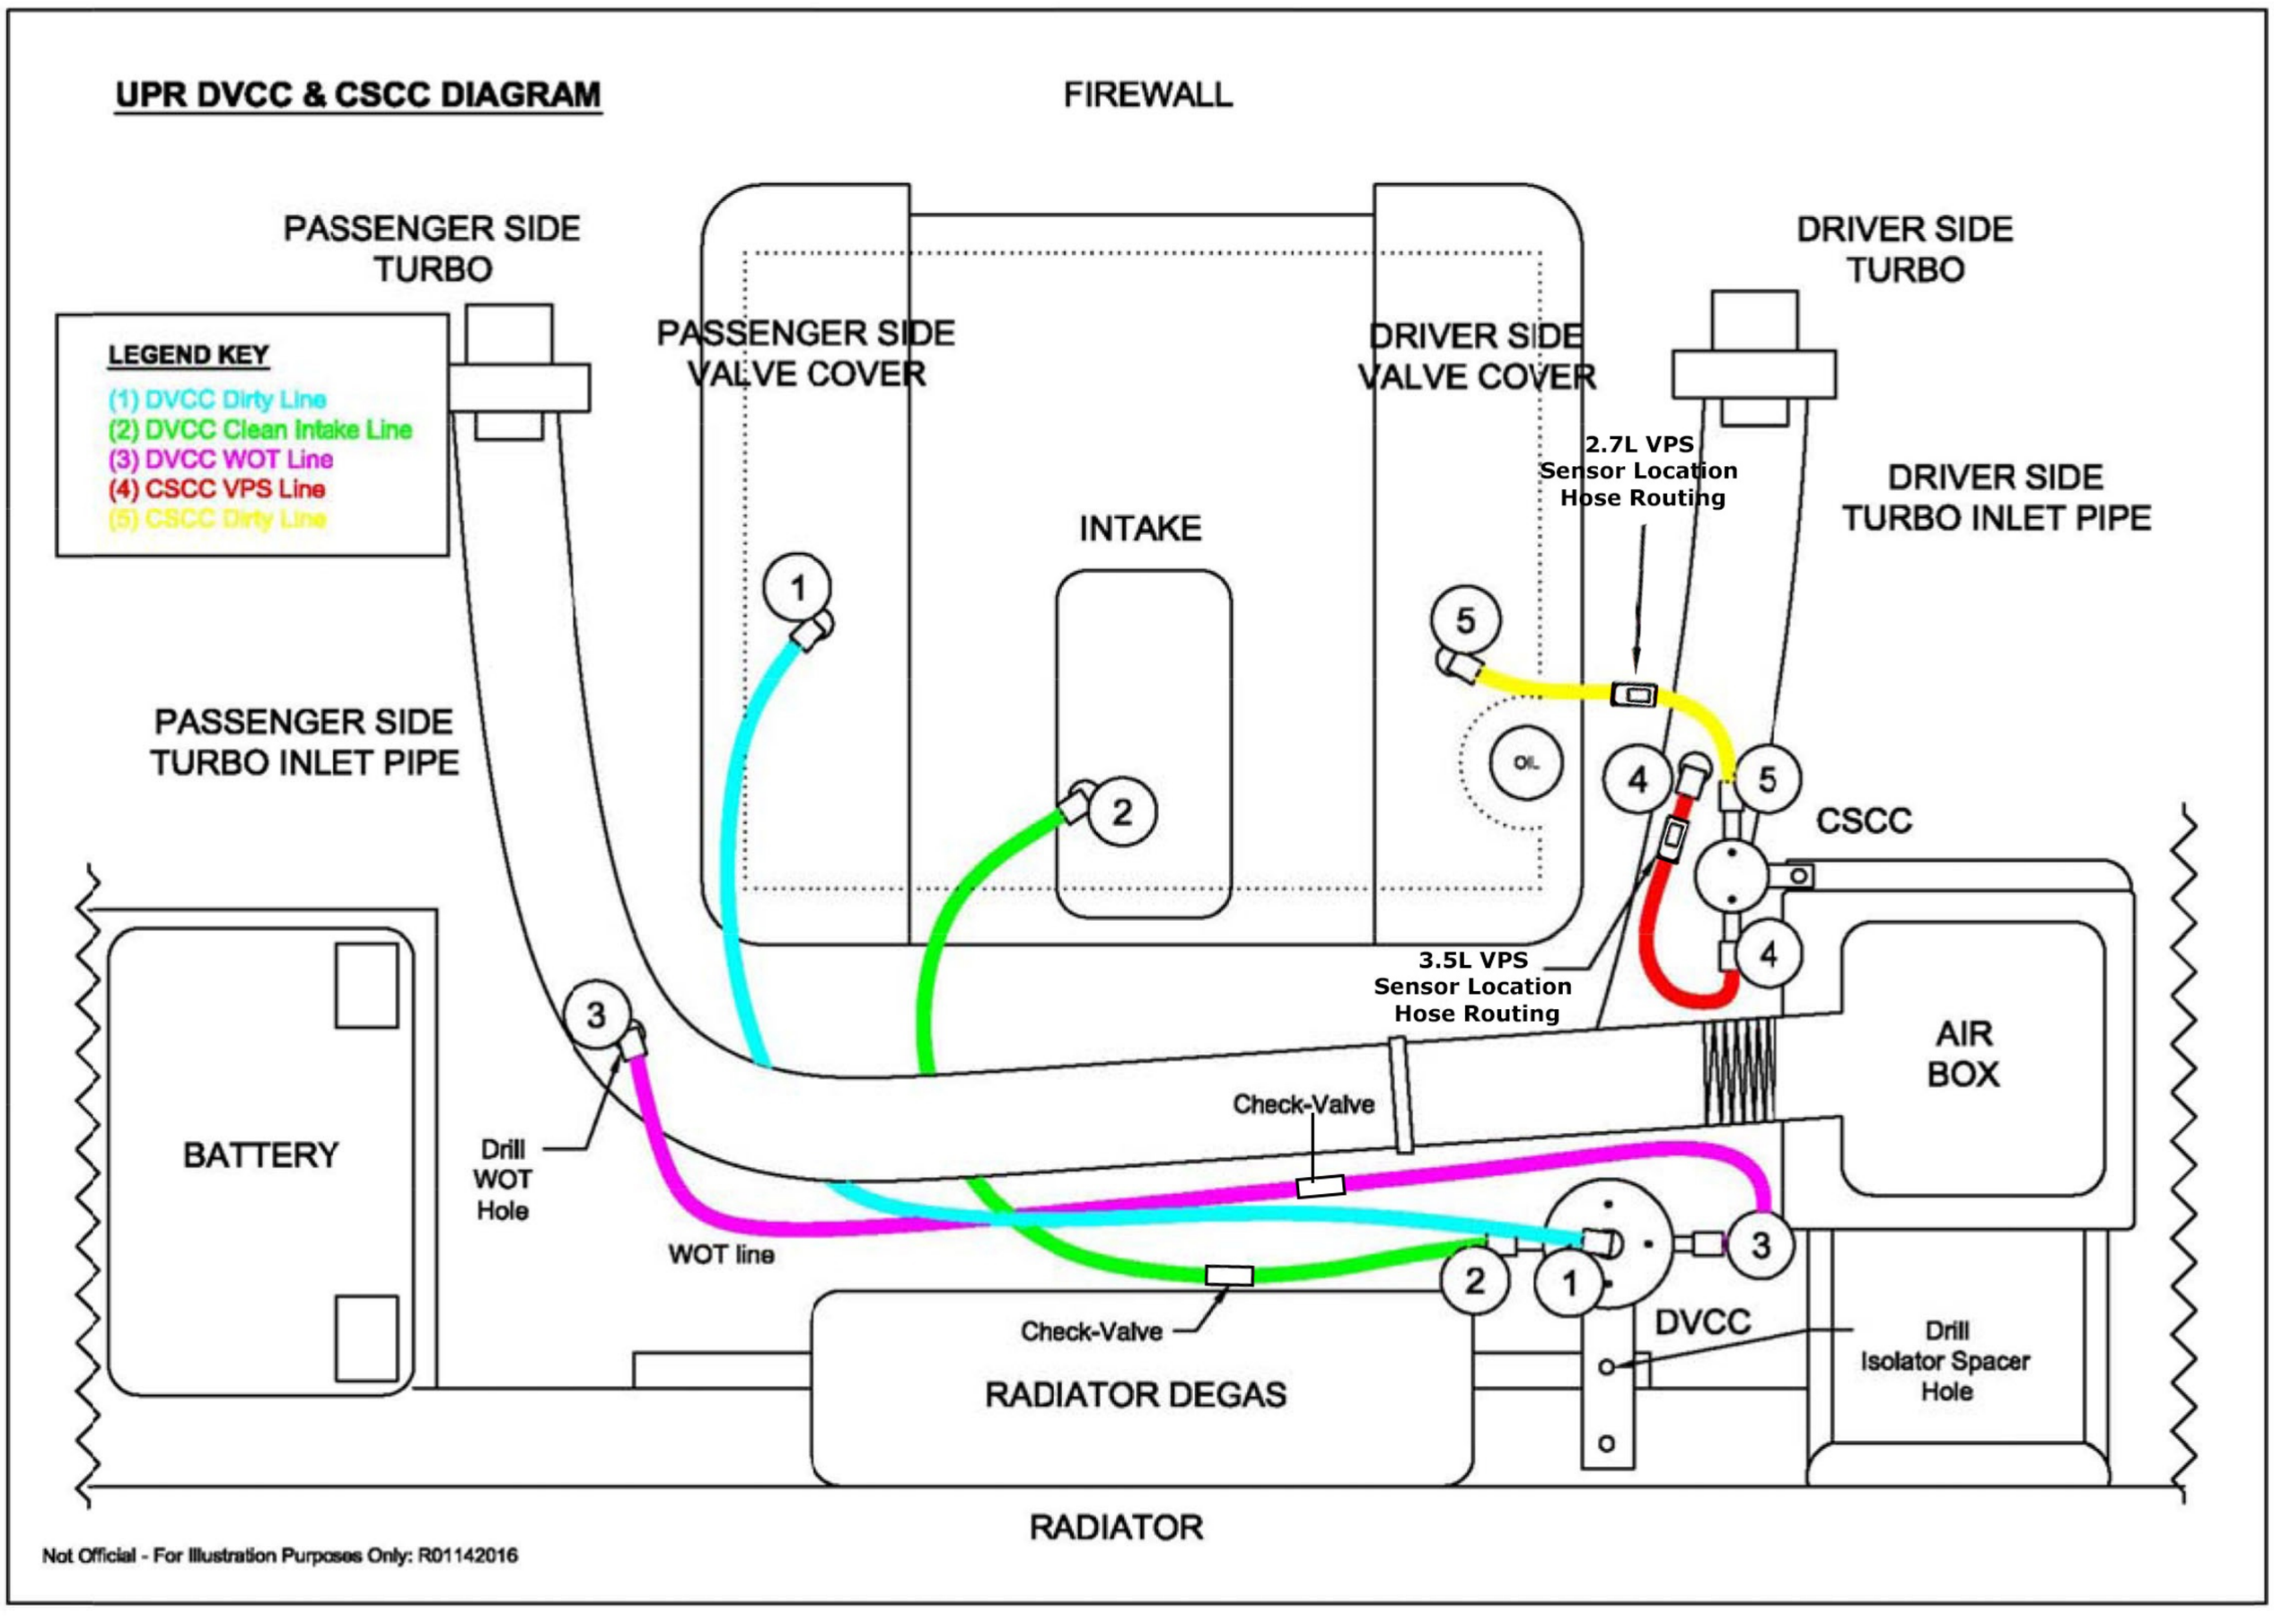
---