

# **SUPER TRAINER™**

## **EZT SERIES Electronic Dog Trainer Owner's Manual**



**D.T. Systems, Inc.**

2872 Walnut Hill Lane

Dallas, Texas 75229

Tel: (214) 350-9446, (888) LUV-U-DOG

Fax: (214) 350-7847

Website: <http://www.dtsystems.com>

E-mail: [customerservice@dtsystems.com](mailto:customerservice@dtsystems.com)

- **EZT 1000**
- **EZT 1002**
- **EZT 1003**
- **EZT 2000**
- **EZT 2002**
- **EZT 2003**
- **EZT 3000**
- **EZT 3002**



**D.T. SYSTEMS, INC.**

Congratulations and Thank you for purchasing our **EZT Super Trainer™** training collar. The EZT series represents the absolute latest technological advancement in the Electronic Dog Training World. It offers Maxx-Range™, the industry's only internally woven antenna in the collar. With up to a 1,200 yard range, they are perfect for hunting, basic obedience and professional training. EZT series collars feature Sixteen levels of stimulation intensity, with an easy 'no-look' clicking stimulation dial. Easy one hand operation allows for maximum control and safety. All models include both Constant and Momentary 'Nick' stimulation, and added features include Positive Vibration and Momentary 'Nick' Stimulation along with Positive Vibration. The collars are 100% Waterproof and can be worn even when the dog is submerged. The EZT Series Dog Training Collar is durable, safe and, when used correctly, very humane. The automatic safety shut-off feature stops the stimulus from both the transmitter and the receiver to prevent accidental or prolonged stimulation.

**IMPORTANT NOTE:**

Please read this owners manual entirely before operating this unit. Should you have any questions about our collars or their operation please contact our Customer Service department. (See last page for address and phone number information).

## WARRANTY

### How the Limited Lifetime Warranty works:

- To qualify for the Warranty you must fill out the warranty registration card which came with your system and mail it (with your original sales receipt) to D.T. Systems within 30 days of purchase.
- There is no charge for parts or labor for the first year on any of our lifetime warranted products.
- When the product's labor warranty expires after the first year, there will be a normal labor charge for any repair under the lifetime warranty program should your system be in need of service. Labor charges will range from \$35 to \$110 depending on:  
1) the system model, and 2) the severity of the repair needed.
- Any defective manufactured part or parts that need replacement will be free during the lifetime warranty period.

## FCC COMPLIANCE

Your **EZT Super Trainer™** has been manufactured under complete compliance with the Federal Communication Commission (FCC). The complex internal structure of each product has been designed to operate within specific regulations of FCC specifications. Any unauthorized modifications to your product is a violation of these specifications.

The **EZT Super Trainer™** has been made with State of the Art equipment. Any fine adjustment should be performed only by D.T. Systems' technicians.

## TABLE OF CONTENTS

• Introduction .....	2
• Table of Contents.....	3
• Features.....	4
• Package Contents.....	4
• Individual Model Features.....	5
• Adjusting and Positioning Your Collar for Proper Fit .....	7
• Parts and Functions.....	8
• Batteries .....	13
• Testing .....	14
• Important Safety Notes.....	15
• Maintenance.....	16
• Warranty .....	17
• FCC Compliance .....	18
• Contact Information.....	16

## FEATURES

Every **EZT Super Trainer™** Electronic Dog Training System Features:

- Digital Technology
- 1,200 Yard Range—(Over 2/3 mile)
- Lightweight, Compact Collars (6.7 oz.) and Transmitters (4.6 oz.)
- 16 Adjustable Intensity Levels
- Gentle Touch System™ Extra Mild Stimulation
- Maxx Range™ Invisible, Embedded Collar Antenna
- Built in Safety Shut-off
- Rechargeable Ni-MH Battery System.
- Completely Waterproof Collars
- Water Resistant Transmitters

## PACKAGE CONTENTS

- Transmitter
- Collar Receiver (Two for EZT 1002, EZT 2002, and EZT 3002) (Three for EZT 1003 and EZT 2003)
- 2" Antenna for the Transmitter
- Rechargeable Batteries for both the Collar and Transmitter. (Only the Transmitter Battery is user replaceable)
- Battery Charger
- Double Jack Cable for Simultaneous Charging
- Test Light
- Owner's Manual
- Carrying Case

## WARRANTY

D.T. Systems Premium Lifetime Warranty is the best warranty offered in the industry. This warranty is free to participating U.S. customers. (The warranty registration card must be returned within 30 days of original purchase). This changes our normal one year parts and labor warranty to a lifetime warranty against manufacturing defects on parts and a one year warranty on labor.

### What is covered:

D.T. Systems Premium Lifetime Warranty covers all parts to be free from manufacturing defects for as long as the unit is held by the original owner.

### What is not covered:

- Batteries are not part of our lifetime warranty. Rechargeable batteries are warranted against defects for one year from the original purchase date.
- Our warranty does not cover parts that malfunction due to abuse, misuse, improper maintenance, or incorrect handling.
- Damage from dogs chewing or wear and tear from excessive field use is not covered.
- Our warranty does not cover the cost of shipping the unit to our repair center. Return ground shipping (inside the continental United States ) to the customer is covered. However, next day or second day air shipping is not covered and if requested will be charged.

## IMPORTANT SAFETY NOTES CONT.

- The electrodes on this collar are made with high grade stainless steel to help prevent any chemical or allergic reactions with your dog's skin.
- To prevent neck irritation, the collar should never be worn for more than 12 hours a day. Changing the collar location on the dog's neck daily will also help prevent irritations. It is important to keep the collar clean. Clean the electrodes regularly with a mild anti-bacterial soap.
- If an irritation is found, carefully wash the dog's neck with soap and water and then wipe the area with Hydrogen peroxide. Dry thoroughly and apply an antibiotic ointment.

## MAINTENANCE

- It is very important to periodically clean your **EZT Super Trainer™** for maximum performance. Regular cleaning will also lengthen the life of your unit.
- Clean the **EZT Super Trainer™** collar box with lukewarm water and a mild anti-bacterial soap.
- Take care to thoroughly clean the space between the electrodes and the belt.
- The belt and buckle should be cleaned with water and a mild soap then allowed to dry completely.
- Always allow the entire unit to completely dry before using.

## INDIVIDUAL MODEL FEATURES

### EZT 1000, EZT 1002, and EZT1003

- The EZT 1000 features the options of Momentary (Nick) Stimulation, and Constant Stimulation.
- The EZT 1002 and EZT 1003 have the same features as the EZT 1000. The EZT 1002 comes with two Collar Receiver units and the EZT 1003 comes with three Collar Receiver units. These Receiver Units are operated from one transmitter. You change from one collar to the other by means of a small switch on the transmitter.

### EZT 2000, EZT 2002, and EZT 2003

- The EZT 2000 features the options of Momentary (Nick) Stimulation, Constant Stimulation, Momentary (Nick) Stimulation along with Positive Vibration.
- The EZT 2002 and EZT 2003 have the same features as the EZT 2000. The EZT 2002 comes with two Collar Receiver units and the EZT 2003 comes with three Collar Receiver units. These multi-dog systems use one transmitter for multiple Receiver Units. You change from one collar to the other by means of a small switch on the transmitter.

## INDIVIDUAL MODEL FEATURES CONT.

### EZT 3000 and EZT 3002

- The EZT 3000 features the options of Constant Stimulation and Positive Vibration.
- The EZT 3002 has the same features as the EZT 3000 and comes with two Collar Receiver units that are operated from the same transmitter. One Collar Receiver is on a black collar and the other is on an orange collar. You change from one collar to the other by means of a toggle switch on the transmitter.
- The EZT 3000 and 3002 models are specially designed for those who are hesitant about using prolonged stimulation (longer than 2 seconds) stimulation on their dog. Bird hunters can use the vibration instead of electrical stimulation when their dog is in the water. This is also a great solution for hearing impaired dogs or for dogs requiring only mild correction.

EDT 1000, 1002, 1003	<b>Momentary (Nick) Constant Stimulation</b>
EDT 2000, 2002, 2003	<b>Momentary (Nick) Constant Stimulation Positive Vibration</b>
EDT 3000& 3002	<b>Constant Stimulation Positive Vibration</b>

## TESTING CONT.

### To Test the Vibration:

- Follow the directions for testing the Electronic Stimulation, and press the button located on the west side of the transmitter.
- If you press the button on the East side of the transmitter, the unit should vibrate for .5 seconds and then the tester should light. If you press the button on the West, the unit should vibrate but the tester should not light.

## IMPORTANT SAFETY NOTES

- Before beginning training your dog should be examined by a veterinarian to assure that there are no physical reasons for your dog's excessive barking and to assure that your dog is in good health.
- Since no electronic device is perfect, there is an extremely slim possibility that your dog may receive an unintentional electric stimulation. Therefore never leave the unit on your dog while unsupervised.
- Your **EZT Super Trainer™** is a very valuable tool if used correctly. Therefore it is extremely important that you completely understand all functions of the collar and how to properly train with it before placing it on your dog.

## TESTING

There are three methods you can use to test your **EZT Super Trainer™** depending upon your model's features.

First, you should make sure that both units are fully charged. Then turn on the power to the collar receiver. Next, follow these steps:

### To Test the Electronic

#### Stimulation:



- A) Place the tester firmly on the electrodes of the collar receiver.
- B) Set the intensity (Note - An intensity level setting of 4 or less might not be enough to light the tester).
- C) Push either the 'NICK', 'STIMU', Red buttons.
- D) The tester light will quickly flash for the Nick function and light steadily when the Constant Stimulation or Constant and Vibration buttons are pushed. (The higher the intensity, the brighter the test light).

## ADJUSTING & POSITIONING YOUR COLLAR FOR PROPER FIT

Proper collar tightness and position are very important to insure safety and correct functioning every time you use the collar.



- All electronic collars need to be very snug to work properly. They must be just tight enough to allow the "prongs" or electrodes to make good skin contact.
- If your collar is too loose, the stimulation may not work properly because good skin contact is not being achieved. This can directly affect the stimulation performance and whether or not the dog will receive the stimulation. Always check for good "prong" contact if it appears that your dog is not responding to the stimulation.
- A loose collar can promote skin irritation from moving or rubbing too much on a dog's neck while they are running or training. The proper snug fit will help prevent this from occurring.
- Proper fit of the collar is important. It should be tight enough on the dog's neck to make good skin contact and allow the dog to breath normally. The collar should never be so tight on the dog's neck that it restricts the dog's normal breathing pattern.
- For proper positioning of your collar receiver box, it should be placed on the center of the dog's neck.

## PARTS & FUNCTIONS



### Transmitter

(EZT 2000 shown, models may vary)

## BATTERIES


All EZT Super Trainer™ training collars are equipped with rechargeable Nickel Metal Hydride (NiMH) batteries. NiMH batteries are not memory sensitive and do not require depletion before recharging.

The batteries come partially charged from the factory. It is, however, recommended that you give the battery a full charge before the first use. This takes about 12 hours.

Remember - Always keep batteries away from flammable substances (especially when charging).

When storing the unit for long periods remember to regularly give the batteries a full charge (12 hours). This should be done once every 4 to 6 weeks.

### Battery Charging Procedure

- 
1. Turn the unit off.
  2. Plug the charger into a standard electrical outlet.
  3. Charge the batteries for 12 hours. This can be done either separately or simultaneously.
  4. After charging, disconnect the battery charging cables from the receptacles and securely replace the rubber battery receptacle covers.
  5. Test the system to make sure that everything is working properly.

## PARTS & FUNCTIONS CONT.

### Remote Training EZT 2000 Series

For the EZT 2000 Series, pressing the button located on the West side of the Transmitter causes the Collar Receiver to Vibrate. Pressing the button located on the East side of the Transmitter causes the Collar Receiver to Vibrate for .5 seconds. After .5 seconds, Continuous Stimulation will be applied simultaneously with the Positive Vibration.

### Collar Indicator Light

When the ON/OFF button on the Collar Receiver is pushed, the RED light will flash steadily once every two seconds to indicate that the unit is active. The RED light changes to a rapid flash (twice per second) when the battery is low and in need of charging.

### Electrodes

Electrodes should fit snugly on the dog's neck to ensure good contact with the skin. For more information on the proper fit of the collar see page (7).


### Collar Belt with Embedded Receiver Antenna

The embedded collar antenna ends at the displaced hole midway along the belt.

#### **CAUTION**

Do not cut the collar belt. Doing so will damage the antenna and may result in severely decreased receiver range.

## PARTS & FUNCTIONS CONT.

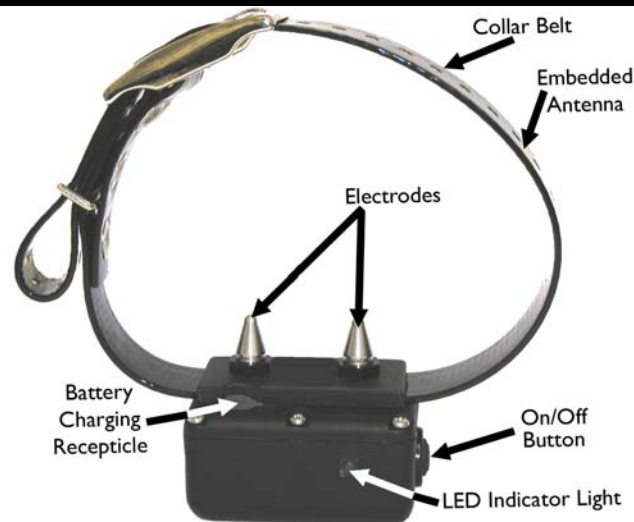

## TURNING ON AND OFF

### Turning the Unit On:

Press and hold the On/Off button on the Collar Receiver. The Red LED Indicator will light solidly for two seconds. Continue holding the Button until the Red light goes off. The unit is now On. The LED Indicator will now flash approximately every two seconds. (Note: The Transmitter is always in a permanent sleep state. It is only On when a button is being pressed, and does not need to be turned off by the user).

### Turning the Unit Off:

When you are ready to shut the unit off, simply press and hold the On/Off button for three seconds. Again the Red LED indicator will light solidly for two seconds. Hold the Button until the light goes off. The Unit is now Off.

## INTENSITY LEVEL



### Intensity Selection Dial

The intensity selection dial allows you to choose between sixteen different levels of stimulation, allowing for very precise control.

## TRAINING INTENSITY LEVEL

The first and most important step in training your dog with your EZT Training System is the determination of the correct Intensity Level to provide the proper training stimulation without over shocking your dog.

To do this place the Collar on the dog's neck and turn it on. Place the Intensity Selection dial so that the System is set on Level One. Press either the NICK or the STIMU Button. Increase the Intensity Level in increments of one until the dog is feeling the stimulation. You should be able to tell when the dog is feeling the shock by the outward signs of discomfort or confusion on it's face. At this point, increase the Intensity Level by one or two. This should be your dog's ideal training level. (Note: Some dog's may require more or less stimulation depending upon their individual nature or size.)

## PARTS & FUNCTIONS CONT.

### Transmitter Indicator Light

When one of the push button switches on the transmitter are pushed, the RED light will turn on to indicate that the transmitter is being operated. When the battery needs charging the RED light will blink once

### Two or Three Dog Model Selection Switch (EZT 1002, 1003, 2002, 2003, & 3002)

Switching between units can be controlled by moving the toggle selection switch to the desired unit.

### Transmitter Antenna

Be very careful when screwing the 2" antenna into the transmitter. Hand tighten only. Over tightening could cause damage to the antenna or the antenna mount.

### Battery Charging Jack - Transmitter

The battery charging jack is located on the side of the transmitter. After charging is complete always close the jack with the rubber plug to prevent foreign particles from getting inside the unit.

### Remote Training Buttons

Pressing the upper button causes the collar to administer a Momentary Stimulation or "Nick". Pressing the lower button gives the Continuous Stimulation (Vibration on EZT 3000).