

# LDS VACUUM PRODUCTS, INC.

975 SUNSHINE LANE  
ALTAMONTE SPRINGS, FL 32714

PHONE: (407) 862-4643

FAX: (407) 862-8723

E-MAIL: [HIVACUUM@AOL.COM](mailto:HIVACUUM@AOL.COM)

WEBSITE: [WWW.LDS-VACUUM.COM](http://WWW.LDS-VACUUM.COM)



ACCREDITED CALIBRATION LABORATORY  
CERTIFICATE NUMBER 1566.01

## GasCheck Instruction Manual

**Models Covered**  
**3000 and 3000is**



## **Declaration of Conformity**

LDS Vacuum Products, Inc.  
975 Sunshine Lane  
Altamonte Springs, FL 32714  
U.S.A.

Declare that the products

### **Gas Check 3000 and Gas Check 3000is**

comply with the requirements of :

89/336/EEC EMC Directive

76/117/EEC Equipment and protective systems intended for use in potentially explosiv atmospheres (Gas Check 3000is only).

in conformity with the following standards and specifications:

EN 50081-1 EMC Emissions - light industrial

EN 50082-1 EMC Immunity - light industrial

EN50014 Electrical equipment for use in potentially explosive atmospheres (Gas Check 3000is only)

EN50020 Electrical equipment for use in potentially explosive atmospheres (Gas Check 3000is only)

Product marking is as follows:

Gas Check 5000is carries the Intrinsic Safety Marking to class EEx ia IIC T4

Gas Check 5000 and Gas Check 5000is carry the CE-mark.

<b>CONTENTS</b>	<b>Page</b>
Introduction	3
Scope & definitions	3
Description	3
Principle	3
Applications	4
Technical data	5
General	5
Performance	5
Battery data	7
Installation	8
Operation	9
Controls	9
Display	11
Audio & Visual outputs	12
Prepare the Gas Check	12
Switch on the Gas Check	13
Recommended leak search	14
Switch off the Gas Check	15
Maintenance	15
Inspect and Clean the Gas Check	15
Replace the Batteries	16
Fault finding	17
Storage & Disposal	18
Storage	18
Disposal	18
Spares and Accessories	19
Introduction	19
Spares	19
Accessories	19
Calibration	19
Refurbish program	19

**The 3000is version of this instrument is manufactured to intrinsically safe standards which are maintained and monitored.**

**For more information about certification please visit [www.LDS-VACUUM.com](http://www.LDS-VACUUM.com).**

# 1 INTRODUCTION

## 1.1 Scope and definitions

This manual provides installation, operation and maintenance instructions for the Gas Check 3000 and 3000is. You must use the Gas Check as specified in this manual.

Read this manual before you install and operate the Gas Check. Important safety information is highlighted as WARNING and CAUTION instructions; you must obey these instructions. The use of WARNINGS and CAUTIONS is defined below.

**WARNING**  
Warnings are given where failure to observe the instruction could result in injury or death to people.

**CAUTION**  
Cautions are given where failure to observe the instruction could result in damage to the equipment, associated equipment and process.

The units of measurement used throughout this manual conform to the SI international system of units of measurement

## 1.2 Description

Refer to Figure 1. The Gas Check is a portable, battery-powered, hand-held gas leak detector. Indications of a leak are shown on the digital display (2) and are also given by a front panel mounted LED flasher (3) and as audible clicks from the rear panel loud speaker (6). Two versions of Gas Check 3000 are available:

- The standard Gas Check 3000 is suitable for leak detection of all non-flammable gases other than air.
- The Gas Check 3000is is intrinsically safe and is suitable for leak detection of hydrogen and other flammable gases, and for leak detection in hazardous areas of EEx ia IIC T4 rating. The Gas check has a convenient storage and carrying case, together with a spare battery holder, a long flexible probe (for leak detection in areas where access is restricted) and a box-spanner for probe changing.

## 1.2 Principal of operation

When the Gas Check is switched on, a small internal fan draws gas samples through the probe and into the Gas Check. The Gas Check measures the thermal conductivity of the gas samples.

When you first switch on the Gas Check (or when you press the manual zero key : see Section 4.1), an auto zero is made. If further samples have a different thermal conductivity from the zeroed sample, the Gas Check calculates and displays the difference as a leak rate.


*Page 3*

This means that you can use the Gas Check to detect any gas other than that in which the Gas Check is zeroed.

### 1.3 Applications

You can use the Gas Check on many types of applications, including those listed below.

- Quality assurance testing on manufactured component seals.
- Laboratory applications, such as the detection of leaks from gas chromatographs, from mass spectrometers, from gas cylinders and fittings.
- Industrial applications, such as the detection of leaks from gas installations, in cylinder receiving rooms, from pipeline assemblies, the detection of leaks from stored gases and the detection of vapours released from stored chemicals.
- Medical applications, such as the detection of leaks from anaesthetic gas bottles and pipelines and leak testing of membrane materials, glove boxes and so forth.
- Valve emission evaluation to EPA (Environmental Protection Agency) method 2.1
- Leak testing of pipeline joints, gaskets, chamber windows and so forth

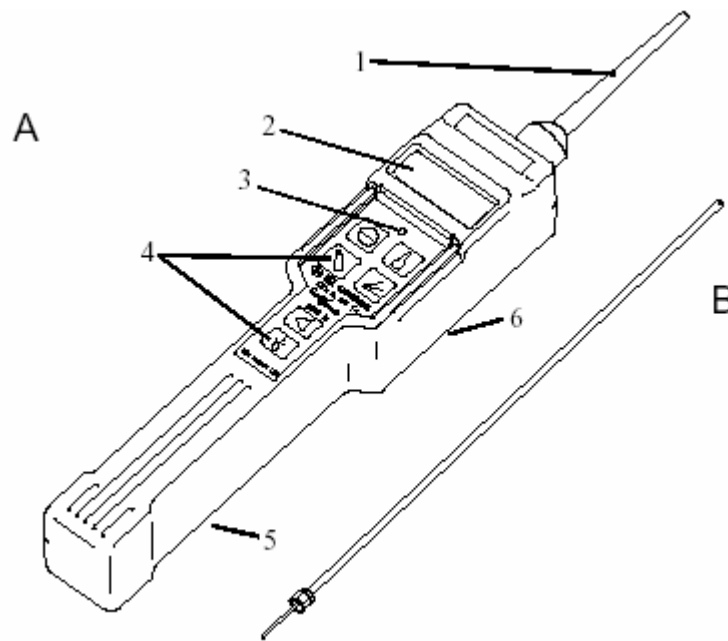


- |   |  |   |                     |
|---|--|---|---------------------|
| A | Gas Check with short probe and nozzle fitted |   |                     |
| B | Long probe                                   |   |                     |
| 1 | Nozzle                                       | 4 | Tactile keys        |
| 2 | Display                                      | 5 | Battery compartment |
| 3 | LED flasher                                  | 6 | Loudspeaker         |

Figure 1 – The Gas Check 3000 and 3000is

## 2 TECHNICAL DATA

### 2.1 General

Operating temperature range		
Gas Check 3000	0 to 50 °C	32 to 122 °F.
Gas Check 3000is	0 to 40 °C	32 to 104 °F.
Storage temperature range		
	-25 to 70 °C -13 to 158 °F.	
Materials of construction		
Storage case	Polypropylene with polyester foam insert	
Gas Check	Polyurethane casing on 3000 only	
	Conductive polypropylene resin with metal bracket on 3000is only	
Dimensions		
Storage case	420 x 320 x 97 mm	16.5" x 12.5" x 3.75"
Gas Check	see Figure 2	
Mass		
Complete storage case	1.6 kg	3.5 lb.
Gas Check	0.5 kg	1.0 lb.
Ingress ratings		
Minimum	IP20	

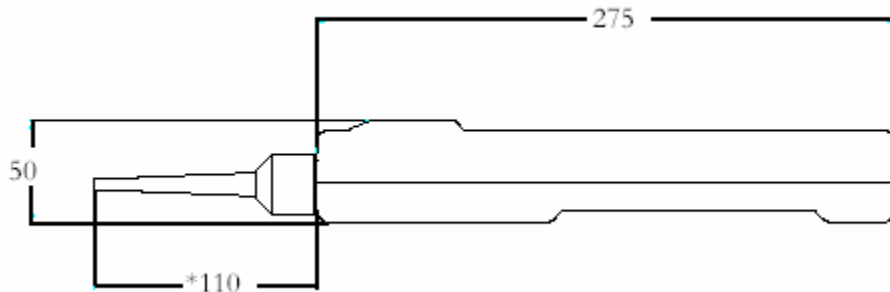

- Length of short probe and nozzle. Length of long probe = 300 mm (12")

Figure 2 – Dimensions (mm)

### 2.2 Performance

**Detector type:** Dual micro-volume thermal conductivity cell

**Gases Detected:**

All gases and vapours having a different thermal conductivity to the ambient air on which it was zeroed. The larger the difference the greater the sensitivity, so that Gas Check is not highly sensitive to the gases normally found in large concentrations in the ambient air, e.g. N<sub>2</sub> (nitrogen) and O<sub>2</sub> (oxygen).

For ease of use the Gas Check groups gases having similar thermal conductivity into one of the 5 gas groups shown in Table 1. Each group has a calibration curve stored in memory. Although the Gas Check will detect ALL gases with a different thermal conductivity to air, Table 1 lists those 12 common tracer gases that have been tested and assigned gas groups. If the gas or gas mixture that you seek is not included in these groups, select group 0 (which is the most sensitive). The Gas Check will then still find leaks quickly even though the measured values will not be displayed accurately. Some gases give a negative response, among them argon (Ar) carbon dioxide (CO<sub>2</sub>) and R134a.

**Minimum response time:**

Short probe fitted	Less than 1 second
Long probe fitted	About 9 seconds

**Recovery time** About 1 second

Maximum detection level with the short probe and nozzle fitted 20 ml/sec

The nozzle when fitted provides automatic 10-fold dilution of the gas stream entering the detector cell.

**Smallest leak detection levels:** see Table 1 (below)

*Note1: the minimum detection levels given in Table 1 apply when the Gas Check is used in clean laboratory air conditions. When used in conditions where the ambient atmosphere contains clouds of the gas for which you leak test, the minimum detection levels may be obscured.*

*Note2: An offset of up to 10 times the detection levels given in Table 1 may be experienced in the presence of electromagnetic interference @ 320 +/- 30 MHz at the levels specified in EN 50082-1*

**Table 1- Smallest Leak Detection Levels**

Gas	Gas Group	Positive/Negative	Smallest Leak Detection Level in ml/sec
H <sub>2</sub>	0	Positive	1 x 10 <sup>-5</sup> ml/sec
R12	0	Negative	1 x 10 <sup>-5</sup> ml/sec
R1301	0	Positive	1 x 10 <sup>-5</sup> ml/sec
R134a	0	Negative	1 x 10 <sup>-5</sup> ml/sec
He	1	Positive	2 x 10 <sup>-5</sup> ml/sec
SF <sub>6</sub>	1	Negative	2 x 10 <sup>-5</sup> ml/sec
R22	1	Negative	2 x 10 <sup>-5</sup> ml/sec
CO <sub>2</sub>	2	Negative	1 x 10 <sup>-4</sup> ml/sec
CH <sub>4</sub>	2	Positive	1 x 10 <sup>-4</sup> ml/sec
Ar	2	Negative	1 x 10 <sup>-4</sup> ml/sec
R11	3	Positive	2 x 10 <sup>-4</sup> ml/sec
O <sub>2</sub>	4	Positive	1 x 10 <sup>-3</sup> ml/sec

## 2.3 Battery data

Note: the energy storage capacity of batteries is affected by temperature. The data in Table 2 is for an ambient temperature of 20 °C (68 °F).

**WARNING**

**For Gas Check 3000is**

**Do not** modify the Gas Check 3000is equipment to allow any recharging.

For Intrinsic Safety T4 Rating in the Gas Check 3000is rechargeable batteries (e.g. Ni-Cad) must not be used.

There is no provision for the recharging of batteries within the Gas Check 3000is.

For alkaline types (MN1500 or LR6) type use only Duracell (Standard, Procell or Ultra) or Ever Ready (Energiser) batteries. Alternatively use any zinc carbon types R6PP or R6S

**For Gas Check 3000**

**Do not** modify the Gas Check 3000 equipment to allow any recharging

**Do not** use in a hazardous area. Use the Gas Check 3000is.

The Gas Check 3000 is designed for use with primary (disposable) batteries.

Rechargeable batteries can be used for the Gas Check 3000 in safe areas.  
There is no provision for the recharging of batteries within the Gas Check 3000.

Number of batteries required	4
Battery type	Alkaline, size AA
Recommended batteries	LR6 (R6) or MN1500
Average operating life	see Table 2

Battery type	Battery life (hours)	
	Gas Check 3000	Gas Check 3000is
LR6 (R6) *	40	20
MN1500 *	40	20
R6S	20	10
R6PP	20	10

- Preferred battery types

Table 2 – Average battery life

The use of the back light will dramatically shorten the battery life.

Do not change batteries in a hazardous area – see section 5.2.


### 3 INSTALLATION

Remove all packaging materials, then open the storage case and inspect the equipment. If the storage case or any other item is damaged, notify your supplier and the carrier in writing within three days; state the Item Number and the Serial Number stamped on rear case of the Gas Check, together with your order number and the invoice number. Do not use the Gas Check if any item is damaged.

Refer to Figure 3 and check that the storage case contains the items listed in Table 3. If any item is missing, notify your supplier in writing within three days.

Qty	Description	Check ( )
1	Gas Check (with short probe and nozzle fitted)	
1	Long probe	
1	Box-spanner	
1	Special screwdriver for access to battery compartment (Gas Check 3000is only)	
1	Spare battery holder with 4 batteries	

Table 3 – Checklist of items in the storage case

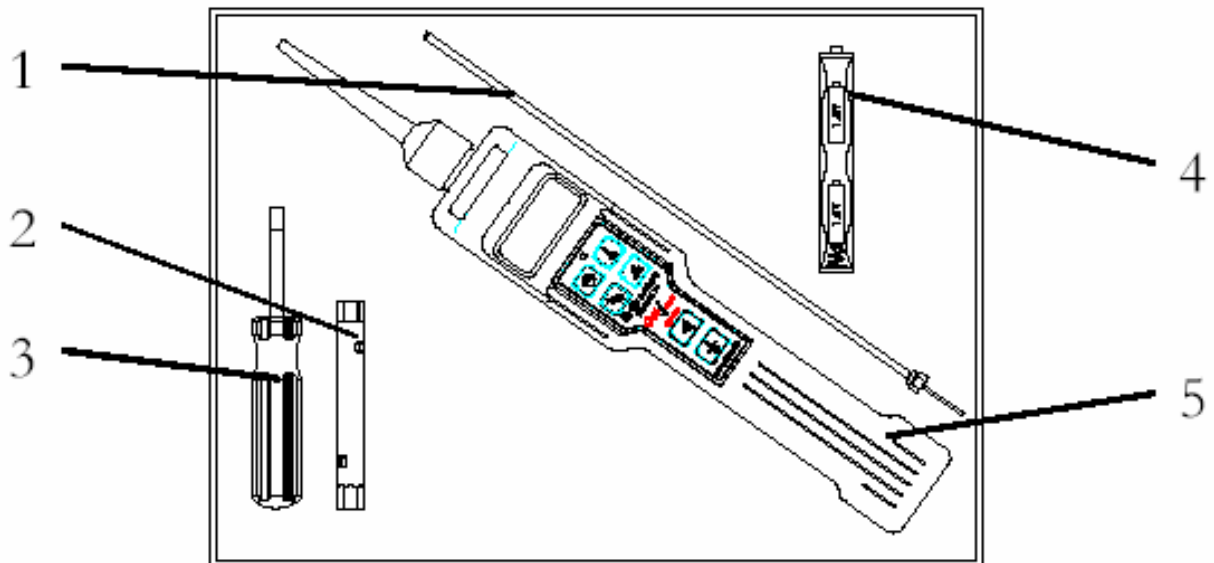

- |                                     |  |
|-------------------------------------|--|
| 1. Long probe                       | 4. Spare battery holder                    |
| 2. Box-spanner                      | 5. Gas Check (with short probe and nozzle) |
| 3. Special screwdriver *<br>fitted) |  |

• Gas Check 3000is only

Figure 3 – Items in the storage case

## 4 OPERATION

### 4.1 Control buttons

Refer to Figure 4. Use the control keys as described below. The display symbols are described in Section 4.2.2.



POWER (1)

Press this key to switch the Gas Check on and off.



ZERO (2)

Just press zero to adjust for background levels, reset the peak hold memory or after changing a gas group or a leak range as required.



GASES (3)

Press and hold the gas key to scroll through the common gases and Gas Groups of the Gas Check B series (shown in Table 4 below). Release when your chosen gas is showing in the lower portion of the display. The Gas Check display should be zeroed to maintain the calibration.



BACKLIGHT/CONTRAST (4) Press the Contrast key once to switch

ON Back-light for a pre-set period (20 seconds). Press and hold this key to change the contrast setting. The message on the display will then show whether contrast drive is to darken or lighten the display. There may be little or no need to use this control at normal temperatures.



NOZZLE/PEAK HOLD (5) When the Gas Check is applied to leak location

in the presence of large leakage, the nozzle is very useful. The nozzle symbol when displayed corrects the leak rate range accordingly. Calibration is performed without it. Press and hold the nozzle key to scroll through the nozzle and peak hold options. Release when desired. Peak hold function displays the value and range indicators for the maximum signal. Press Zero to reset this. Note that the audio follows the detected signal even when the signal falls below the stored peak hold value.




RANGE (6) Range may be selected to concentrate on significant leakage levels

only rather than Auto range all leakage. When auto range is selected the display shows the auto range symbol in the lower portion. Where necessary hold down the key to select a fixed less sensitive range rather than Auto-range in order to restrict the leak response. The auto range symbol will not appear on the display if auto range is not selected.

Gas	Gas Group	Positive/Negative
H <sub>2</sub>	0	Positive
R12	0	Negative
R1301	0	Positive
R134a	0	Negative
He	1	Positive
SF <sub>6</sub>	1	Negative
R22	1	Negative
CO <sub>2</sub>	2	Negative
CH <sub>4</sub>	2	Positive
Ar	2	Negative
R11	3	Positive
O <sub>2</sub>	4	Positive

Table 4 – Gas groups

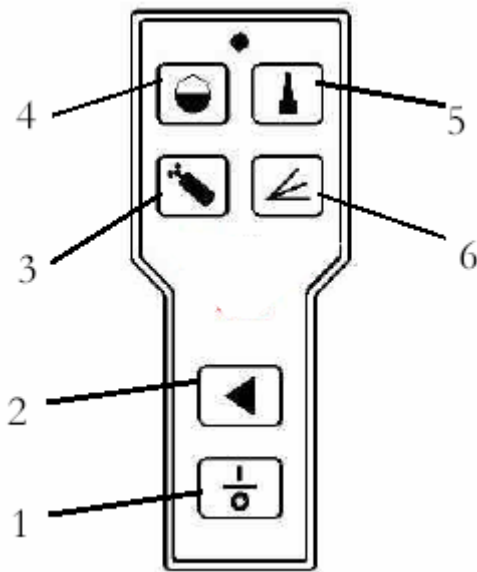

- |   |       |  |   |                    |  |
|---|-------|--|---|--------------------|--|
| 1 | Power |  | 4 | Backlight/Contrast |  |
| 2 | Zero  |  | 5 | Nozzle/Peak hold   |  |
| 3 | Gases |  | 6 | Range              |  |

Figure 4 – Control keys (layout shown for both Gas Check 3000 and 3000is)

## 4.2 Display

### 4.2.1 General

The display is arranged to show the leak rate and other status including user changes to the settings.

- In normal use the upper portion of the display is used for a large size digital representation of the leak rate (see Section 4.2.2) and status information is shown as symbols (see section 4.2.3) appearing in the lower portion. The Gas Group or the gas chosen will show on the lower right hand side of the display.
- In response to key presses, written text will appear confirming the changes to settings.

Examples are

Zeroing detector

Nozzle On

Peak hold On

Nozzle off

Peak hold off

He

Group 0

Contrast darker

Contrast lighter

### 4.2.2 Leak rate indication

Leakage is displayed as a single (signed) digit x 10 (signed) range for ease of interpretation and calibration. [Note that some gases (e.g. CO<sub>2</sub> and R134a) may cause a negative leak indication after Gas Check zeroing in clean air. See the Positive/Negative column in Table 4]

Examples are

**Leak rate for a positive gas:**  $5 \times 10^{-5} \text{ ml / s}$

**Leak rate for a negative gas:**  $- 3 \times 10^{-4} \text{ ml / s}$

### 4.2.3 Other display symbols

Small display indicators show zeroing, nozzle fitted, peak hold, auto range and low battery voltage.

**Zeroing**



This symbol appears whilst the Gas Check is zeroing then it disappears.

**Auto range**



This symbol shows when the Gas Check leak rate is not fixed within one range.

**Nozzle**



This symbol indicates that the Gas Check is being used with the Nozzle on.

**Peak hold**



This symbol indicates that the Gas Check display is held to the maximum.

**Low battery**



This symbol indicates that the battery pack is lower than required for use.

**Negative**



This shows the leak rate signal is negative (valid for testing some gases, see Table 4).

## 4.3 Audio and visual outputs

The Gas Check 3000 series have an internal audio sounder and a flashing LED indicator. They both operate together when the detected leak rate climbs from the zero indication towards the maximum on the leak rate range (see Section 4.2.1). They also operate once to confirm a key press.

## 4.4 Prepare the Gas Check

### 4.4.1 Select which probe to use

*Note: Whenever possible, use the Gas Check with the nozzle fitted. The nozzle helps to protect the short probe from blockage or damage. You cannot use the nozzle with the long probe.*

Open the storage case and remove the Gas Check. The Gas Check is supplied with the short probe fitted and the nozzle fitted; a long probe is supplied in the storage case. Standard use is with the short probe and nozzle. For higher sensitivity, remove nozzle and clear the nozzle symbol from the display (section 4.1).

Determine whether you want to use the short probe or the long probe and whether you want the nozzle fitted, as follows:

Use the Gas Check with the short probe and without the nozzle to detect small leak rates of approximately  $1 \times 10^{-4}$  ml/sec and lower. Press the nozzle key to clear the nozzle fitted indicator: refer to Section 4.1

The nozzle simply pulls off and pushes onto the end of the Gas Check. To remove the nozzle or to change the probe, refer to Section 4.4.2.


#### 4.4.2 Remove the Gas Check nozzle or change the probe (if required)

- 1 Switch off the Gas Check.
- 2 Refer to Figure 5. Hold the nozzle (1) by its wide base and gently twist and pull it to remove it .
- 3 With the small end of the box spanner towards the Gas Check, guide the end of the probe (2 or 7) through the middle of the box spanner. Push the box spanner onto the nut (3) and turn the box spanner anticlockwise to undo and remove the probe.
- 4 Push the probe insert (4) of the other probe into the sample hole in the probe/nozzle fitting (5), then tighten the nut (3) one or two turns by hand to loosely secure the probe.
- 5 Tighten the nut as per instruction 3 but turn the box spanner clockwise. Hand tighten the nut, but do ensure that the metal part of the capillary tube (2) under the plastic sheath is not loose or else a “noisy” or “jumpy” detected signal will result.

### CAUTION

**DO NOT OVER TIGHTEN THE PROBE NUT**

- 6 If you have fitted the short probe to the Gas Check, push the nozzle onto the Gas Check if required (refer to Section 4.4.1). With the nozzle on, the nozzle symbol must appear (refer to section 4.1).

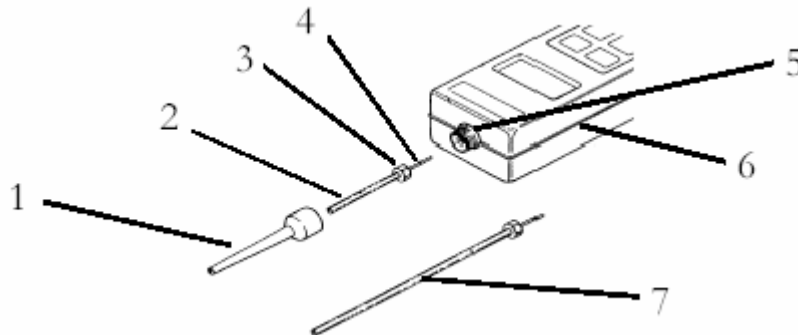

- |   |              |   |                      |
|---|--------------|---|----------------------|
| 1 | Nozzle       | 5 | Probe/nozzle fitting |
| 2 | Short probe  | 6 | Gas Check            |
| 3 | Nut          | 7 | Long probe           |
| 4 | Probe insert |   |                      |

Figure 5 – Change the probe

#### 4.5 Switch on the Gas Check

Press key and wait for Gas Check to bleep & flash, the display to light up and show “zeroing detector”. When not detecting leaking gas, Gas Check still flashes and beeps periodically to indicate that it is ON.

Gas Check remembers the settings on instrument power off so that the operator rarely if ever has to alter any of them. The settings for gas group, auto range, peak hold and nozzle are shown on the display.

The response of Gas Check can readily be checked against a Portable Reference Leak (PRL) traceable calibration accessory.

## **4.6 Recommended leak search procedure**

### **4.6.1 General procedure**

*Note: When you use the Gas Check, do not allow dirt or debris to enter the end of the probe or nozzle. If the probe or nozzle is blocked, the Gas Check will not operate correctly.*

The following test procedures assume that you have fitted the short probe. The response time of the Gas Check increases from about 1 second or less when the short probe is fitted to about 9 seconds when the long probe is fitted. If you use the long probe for leak detection, ensure that you move the end of the probe much more slowly along the area you leak test.

Ensure the part under test contains a reasonable percentage of a trace gas that is different from normal air!

Move the end of the probe (or nozzle) around the area of a suspected leak and look at the display (or listen to the audible clicks or note the visual LED flash rate on the Gas Check) to identify the location of a leak. Specific procedures for leak detection along seams and around pipe joints are described in the following sections.

When required:

- Use the peak hold and Auto-Ranging modes to continue to check for leaks, but to display the largest leak detected
- If you want to zero the Gas Check, move the end of the probe (or nozzle) away from any possible leak, into a clean air zone, then press the manual zero key: refer to Section 4.1.

Note that leak sensitivity depends on the ambient conditions. If you want to accurately measure a leak, compare the indicated leak with a calibration standard, such as a portable reference leak: see Section 7.3.

When the Gas Check indicates that a leak has been found, move the probe (or nozzle) back to determine the precise location of the leak. The leak is located where the largest leak size is indicated on the display and where highest frequency clicks and visual flashing rate are emitted by the Gas Check, on the current range.

### **4.6.2 Leak detection along seams**

Move the end of the Gas Check probe (or nozzle) along the length of the seam, so that it just rests on the seam. The speed at which you move along the seam depends upon the size of the leak that you search for:

- If the leak is large, you can move fairly fast along the seam, at approximately 25 mm per second.
- If the leak is small, move slowly along the seam, at approximately 10 mm per second.

*Page 14*

### 4.6.3 Leak detection at pipe joints

Use the same procedure as for leak detection along seams (see Section 4.6.2), however move the probe (or nozzle) around the joint at approximately half the speed specified in Section 4.6.2. Light gases (such as hydrogen and helium) diffuse quickly into air, so an apparent leak on the side or top of a joint may actually be a leak at the bottom of the joint.

## 4.7 Switch off the Gas Check

When the Gas Check 3000 has been left for a few seconds without any key press, then press the I/O key. The Gas Check will ignore I/O presses during the instrument power up sequence and during any zeroing.

### 4.7.1 Auto Shut Off

If the Gas Check is left for a period of approximately 10 minutes without key presses it will shut itself off.

# 5 MAINTENANCE


## 5.1 Inspect and clean the Gas Check

**CAUTION**

Do not clean the probe while it is attached to the Gas Check and do not try to clean the sample hole inside the probe/nozzle fitting which leads to the detector. If you do, you can damage the Gas Check.

1. Switch off the Gas Check.
2. Refer to Figure 5. If the nozzle is fitted, hold the nozzle (1) by its wide base and gently twist and pull it to remove it from the Gas Check.
3. With the small end of the box spanner towards the Gas Check, guide the end of the probe (2 or 7) through the middle of the box spanner. Push the box spanner onto the nut (3) and turn the box spanner anticlockwise to undo and remove the probe.
4. Inspect the Gas Check. If the case of the Gas Check is cracked or dented, we recommend that you do not continue maintenance, but return the Gas Check to your supplier for inspection and calibration.
5. Wipe the Gas Check with a clean, lint-free cloth moistened with a weak solution of detergent.
6. Carefully wipe the outer faces of the probe/nozzle fitting to remove any small particles of dirt or debris.
7. Use a suitable tool to push any blockage out of the end of the nozzle, then wipe the outside of and the inner face of the wide part of the nozzle.
8. Inspect the probe:
  - The hole in the short probe is approximately 0.47mm (0.0185inches) in diameter. We recommend that you push stiff wire of 0.25mm (0.01inches) diameter or less into the hole in the probe to remove any blockage.
  - The long probe is too long to be effectively cleaned. If the probe is blocked, we recommend that you obtain a new probe, available as a spare: refer to section 7.

9. Refit the required probe to the Gas Check: refer to Steps 4 to 6 in Section 4.4.2.
10. Place a light wipe of thin petroleum jelly around the inner face of the wide part of the nozzle, then fit the nozzle to the Gas Check.
11. Place the Gas Check and nozzle (and the long probe, if just removed) in its storage case. Store the case in suitable conditions: refer to Section 6.1.

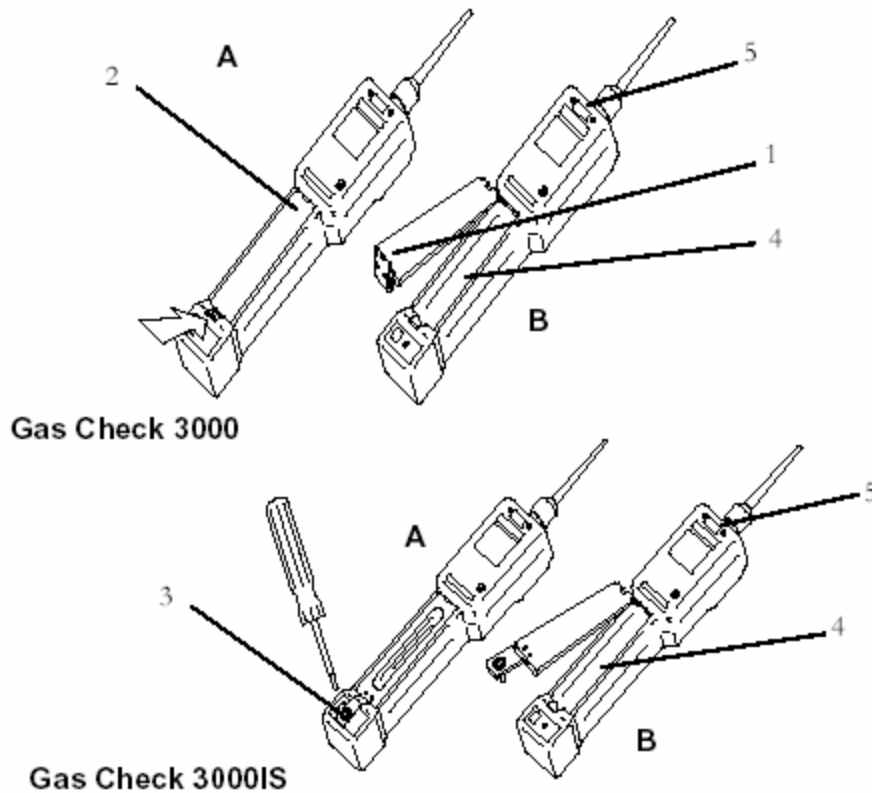

- |   |                                      |   |                     |
|---|--------------------------------------|---|---------------------|
| 1 | Catch                                | 4 | Battery compartment |
| 2 | Battery compartment cover            | 5 | Serial number       |
| 3 | Captive screw location (3000is only) |   |                     |

Figure 6 – Replace the batteries (Gas Check 3000 and 3000is shown)

## 5.2 Replacing the batteries

**WARNING**  
 Replace the batteries in the Gas Check 3000is in a safe area where there are no flammable gases. If you do not, there may be a risk of fire or explosion.

**WARNING**

Use only dry cell (non-rechargeable) batteries in the Gas Check 3000is. The internal resistance of rechargeable batteries is too low to maintain a T4 safety rating. The recommended batteries are specified in section 2.3 Battery Data.

**CAUTION**

Ensure that the rubber sleeve on the female part of the battery holder is correctly fitted when you fit new batteries. If you do not, you could refit the holder in the Gas Check 3000is with incorrect polarity, which will damage the Gas Check 3000is.

*Note: A spare battery holder is supplied with the Gas Check.*

1. Refer to Figure 6. Turn over the Gas Check so that the battery compartment is at the top: see detail A.
2. On the Gas Check 3000, use a small coin, screwdriver or your fingernail to press the catch (1) on the battery compartment cover (2), then pull up and remove the cover: see detail B. On the Gas Check 3000is, use the special screwdriver supplied to undo the captive screw on the battery compartment cover and remove the cover. This is located at the end of the Gas Check at position (5).
3. Remove the battery holder from the Gas Check. If required, you can carefully unplug the battery holder so that you can detach the holder from the Gas Check.
4. Remove the old batteries (4) from the battery holder. Dispose of the batteries (see section 6.2).
5. Inspect the inside of the battery compartment and battery holder. If the batteries have leaked, use a cloth dampened with a weak solution of detergent to clean the battery compartment and battery holder.

**CAUTION**

The Gas Check 3000is will blow a factory fitted internal protection fuse if the battery clip is inadvertently reverse connected. The complete instrument will have to be returned to the supplier for fuse replacement. The Gas Check 3000 has an internal self-resetting fuse. Please do use care.

6. Fit four new batteries in the battery holder. Ensure that you fit the batteries in the correct orientation. To reduce the risks of incorrectly connecting the battery clip remove one battery before you refit the battery holder to the Gas Check. You then add the fourth battery into the clip before pushing it home.
7. On Gas Check 3000, refit the battery compartment cover (2) and ensure that the catch (1) is engaged.

On the Gas Check 3000is, refit the battery compartment cover and use the special screwdriver to tighten the captive screw and secure the cover in place.

**CAUTION**

Ensure that the screw is located squarely to the threaded insert before tightening else the battery compartment cover may not be properly secured due to cross threading. The instrument will then have to be returned to the supplier for replacement of the Gas Check case including a new serial number.

8. Switch on the Gas Check to ensure that the batteries are correctly fitted. If the display remains blank when you switch on the Gas Check, refer to section 5.3.

*Page 17*

### 5.3 Fault finding

<b>Fault symptom</b>	<b>Diagnosis</b>	<b>Action</b>
Unit will not switch on	No/dead batteries fitted	Try another battery set (safely)
Unit will not switch off	Software locked out	Remove & replace battery clip (safely)
Battery symbol appears	Battery state low	Replace batteries (safely)
Back light drains battery life	Excessive use of backlight	Avoid or reduce use of backlight
Unit will not zero	Software locked out by hardware	Remove & replace batteries (safely)
Display appears blank/dim	Contrast control setting wrong	Turn off & on; press & hold contrast
Numbers do not change	Peak hold selected	Press zero or change from Peak hold
Range does not change	Range not set in Auto-range	Press & hold Range until Auto-range
He range will not show -5	Unit with nozzle On and/or range	Reset via Nozzle and Range keys
Gas group is wrong	Gas Group not set correctly	Press & hold Gases until shown OK
Nozzle/Peak not showing	Nozzle/Peak is not set correctly	Press & hold Nozzle until both correct
Calibration due message	Unit has exceeded 1 year on cal	Return to LDS for recalibration
Blocked probe	Probe blocked	Remove probe and clean
Stalled motor	Motor failed & probe not blocked	Return to LDS for repair
Instrument readings noisy	Loose probe	Tighten nut slightly
Instrument readings noisy	Test environment contaminated	Move item under test into cleaner area
3000is unit will not turn on	Internal fuse blown	Return to supplier for repair

Table 5 – Fault finding

## 6 STORAGE AND DISPOSAL

### 6.1 Storage

If you will store the unit for a long time, we recommend that you remove the batteries: refer to Section 5.2

Refit the Gas Check in its storage case and store in dry, cool conditions. Unpack as described in Section 3.

### 6.2 Disposal

Dispose of the Gas Check, components and used batteries safely in accordance with all local and national environmental safety requirements. Some of the Gas Check carry case plastic material is recyclable.

## 7 SPARES AND ACCESSORIES

### 7.1 Introduction

Order spare parts from LDS Vacuum Products, Inc. When you order, please state for each part required:

- Serial Number stamped on your Gas Check refer to Figure 6.
- Item Number and description of part.

### 7.2 Spares

Spare	Item Number
Long probe	A-08045
Short probe	A-08043
Replacement battery holder	1/BH-01
Nozzle 3000	08024CFC0
Nozzle 3000is	08024CPC8
Box Spanner	3/BI-01
3000is screwdriver	A-08048
Case	28367C
Instruction Manual	SPGCMAN3K

### 7.3 Accessories

Accessory	Item Number
Portable reference leak - specifying gas, leak rate and pressure	PRL

### 7.4 Calibration

LDS offer a calibration service including issue of traceable certification to National Standards.

### 7.5 Refurbish program

LDS offer a refurbish service for all customer repairs.